

BAJAJ
Pulsar₂₀₀
OIL/COOLED



CATÁLOGO DE PARTES

www.auteco.com.co
Línea gratuita nacional-018000 520090



IRC *LLANTAS* *TECNOLOGÍA JAPONESA*



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
PULSAR 220	DELANTERA	90/90X17	IRC	NF45	PISTERA TUBE LESS	41070-9017-NF45/18
				NF52TL	PISTERA TUBE LESS	41070-9017-NF52TL/18
				NF53	PISTERA TUBE LESS	41070-9017-NF53/18
				NF42	PISTERA TUBE LESS	41070-9017-NF42/18
				NF46	PISTERA TUBE LESS	41070-9017-NF46/18
				RX01	PISTERA TUBE LESS	41070-1117-RX01/18
	TRASERA	110/70-17	IRC			
		130/70-17		RX01	PISTERA TUBE LESS	41070-1317-RX01/18
PULSAR 200NS PULSAR 200/180 UG	DELANTERA	120/80X17	IRC	NR57TL	PISTERA TUBE LESS	41070-1217-NR57TL/18
		2.75X17		NR53	PISTERA	41070-2717-NR53/18
		90/80X17		NR73	PISTERA	41070-9017-NR73TT/18
		90/90X17		NF53	PISTERA	41070-9017-NF53/18
		100/80-17		NR73	PISTERA	41070-1017-NR73/18
		110/70-17		RX01	PISTERA	41070-1117-RX01/18
	TRASERA	130/70-17	IRC			
				RX01	PISTERA	41070-1317-RX01/18
PULSAR 135	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
		90/80-17		NR73TT	PISTERA	41070-9017-NR73TT/18
		70/90-17		NF63BZ	PISTERA	41070-7017-NF63BZ/18
		2.75X17	MAXING	SP1	SPORT	41070-2717-SP1/19
	TRASERA	110/80-17	IRC	NR48TL	PISTERA TUBE LESS	41070-1117-NR48TL/18
				NR53	PISTERA	41070-1117-NR53/18
				NR64	PISTERA	41070-1117-NR64/18
		100/80X17		NR73	PISTERA	41070-1017-NR73/18

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
PULSAR 180 (CLASSIC, DTS-i)	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18
				NF2	LINEAL	41070-2718-NF2/18
				NR53	PISTERA	41070-2718-NR53/18
			MAXING	SP1	SPORT	41070-2718-SP1/19
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-3018-SP1/19
DISCOVER 125 ST DISCOVER 125 DISCOVER 100 DISCOVER 135 KS/ES DISCOVER DTSI PULSAR 180 DTS-i TEC,BLACK, PULSAR II	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
		90/80-17		NR73TT	PISTERA	41070-9017-NR73TT/18
		70/90-17		NF63BZ	PISTERA	41070-7017-NF63BZ/18
		2.75X17	MAXING	SP1	SPORT	41070-2717-SP1/19
	TRASERA	3.00X17	IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18
				NR1	SPORT	41070-3017-NR1/18
		100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18
				MB99	PISTERA	41070-1017-MB99/18
				80/90-17	NR78YL	PISTERA
		PLATINO 125 5S, PLATINO CT, 100 SPORT, 125 XCD 125	DELANTERA	90/80-17	IRC	NR73TT
70/90-17	NF63BZ			PISTERA		41070-7017-NF63BZ/18
2.75X17	NR53			PISTERA		41070-2717-NR53/18
	GP1			TRIAL ROMBO		41070-2717-GP1/18
MAXING	SP1			SPORT	41070-2717-SP1/19	
TRASERA	100/80-17		IRC	NR73	PISTERA	41070-1017-NR73/18
				MB99	PISTERA	41070-1017-MB99/18
	3.00X17		IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18
NR1	SPORT	41070-3017-NR1/18				

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
BOXER CON RIN 17" BM150, CT 100, BM 100	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	41070-9017-NR73TT/18
		90/90-17		NR53	PISTERA	41070-2717-NR53/18
		2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
				GP1	TRIAL ROMBO	41070-2717-GP1/18
	TRASERA	100/80-17	IRC	SP1	SPORT	41070-2717-SP1/19
				NR73	PISTERA	41070-1017-NR73/18
		100/80-17	IRC	MB99	PISTERA	41070-1017-MB99/18
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18
BOXER CON RIN 18" 4T, UG, K-TEC	DELANTERA	2.50X18	IRC	NR1	SPORT	41070-3017-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-2518-SP1/19
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
BOXER BM 100 CLASSIC ES	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18
	TRASERA	3.00X17		NR1	SPORT	41070-3017-NR1/18
BOXER CON RIN 18" (S1D) CALIBER 115 WIND 125	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18
				NF2	LINEAL	41070-2718-NF2/18
				NR53	PISTERA	41070-2718-NR53/18
	TRASERA	3.00X18	MAXING	SP1	SPORT	41070-2718-SP1/19
			IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18
				NR1	SPORT	41070-3018-NR1/18
				NR53	PISTERA	41070-3018-NR53/18
			MAXING	SP1	SPORT	41070-3018-SP1/19

APLICACIONES DE LAS LLANTAS IRC Y MAXING EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CODIGO
AVANTI	DELANTERA	2.25X17	IRC	NF3	LINEAL	41070-2217-NF3/18
				NR53	PISTERA	41070-2217-NR53/18
		2.50X17	MAXING	TR1	TRIAL ROMBO	41070-2517-TR1/18
		2.25X17		MP1	LINEAL	41070-2217-MP1/19
	TRASERA	2.75X17	IRC	NR2	SPORT	41070-2717-NR2/18
				NR53	PISTERA	41070-2717-NR53/18
				GP1	TRIAL ROMBO	41070-2717-GP1/18
PLUS/CLASSIC/LEGEND	DELANTERA	3.50X10	IRC	SP1	SPORT	41070-2717-SP1/19
	TRASERA			MB-27	SPORT	41070-3510-27/18

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.auteco.com.co accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco-Kawasaki.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS

ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
Alejandro Posada	ASESOR COMERCIAL	Norte Área Metropolitana de Medellín	314 811 04 09	aposada@auteco.com.co
Alexánder Grajales	ASESOR COMERCIAL	Cordoba, Cauca y el Bagre	310 373 90 19	agrajales@auteco.com.co
Bernardo Muriel	ASESOR COMERCIAL	Arauca y Norte de Santander	310 436 27 42	bmuriel@auteco.com.co
Carlos Humberto Tobón	ASESOR COMERCIAL	Tolima	310 447 36 11	ctobon@auteco.com.co
Carlos Salazar	ASESOR COMERCIAL	Bucaramanga y Área Metropolitana	310 414 88 45	csalazar@auteco.com.co
Edwin Guzman Jiménez	ASESOR COMERCIAL	Atlántico	313 584 21 93	eguzman@auteco.com.co
Eliecer Zamora Vásquez	ASESOR COMERCIAL	Cali y Cauca	313 584 47 13	ezamora@auteco.com.co
Elkin Humberto Gallego	ASESOR COMERCIAL	Sur de Área Metropolitana de Medellín	310 436 25 98	egallego@auteco.com.co
Esmeralda Forero Acosta	ASESOR COMERCIAL	Centro Bogotá	313 585 22 07	eforero@auteco.com.co
Fredy Alexánder Jiménez	ASESOR COMERCIAL	Concesionarios, CSA de Bogotá y Amazonas	313 585 98 37	fjimenez@auteco.com.co
Gonzalo Saldarriaga	ASESOR COMERCIAL	Neiva y Norte del Huila	310 406 88 74	gsaldarriaga@auteco.com.co
Héctor Alonso Valencia	ASESOR COMERCIAL	Sucre	310 447 36 52	hvalencia@auteco.com.co
Héctor Jairo López	ASESOR COMERCIAL	Caldas y Norte de Risaralda	312 257 67 91	hlopez@auteco.com.co
Hernán Pedraza	ASESOR COMERCIAL	Pueblos de Condinamarca	311 899 7728	hpedraza@auteco.com.co
Hilde Alexánder García	ASESOR COMERCIAL BOUTIQUES	Área Metropolitana Medellín	321 641 50 63	hgarcia@auteco.com.co
Jaime Alfonso Villalba	ASESOR COMERCIAL	Bolívar	313 584 72 62	jvillalba@auteco.com.co
Jesús Enrique Quintero Restrepo	ASESOR COMERCIAL	Magdalena	313 585 60 28	jequintero@auteco.com.co
John Jairo López	ASESOR COMERCIAL	Risaralda, Quindío y Cartago	310 444 22 15	jlopez@auteco.com.co
Jorge Gil	ASESOR COMERCIAL	Casanare, Vichada, Boyacá	313 672 73 53	kgil@auteco.com.co
Jorge Mario Maya	ASESOR COMERCIAL	Cesar y Guajira	312 258 93 84	jmaya@auteco.com.co
Jovany Castro Betancur	ASESOR COMERCIAL	Sur del Huila y Caquetá	313 767 78 43	jcastro@auteco.com.co
Karen Lorena Candanoza	ASESOR COMERCIAL	Resto de Bogotá	313 585 35 61	kcandanoza@auteco.com.co
Mauricio Mejía	ASESOR COMERCIAL	Suroeste, Noreste y Chocó	312 257 61 75	mmejia@auteco.com.co
Miguel Ángel Guerrero	ASESOR COMERCIAL	Norte del Valle y Buenaventura	314 772 07 98	mguerreiro@auteco.com.co
Nestor Adarve	ASESOR COMERCIAL	Resto de Antioquia y Urabá	310 436 26 89	nadarve@auteco.com.co
Rubén Darío Campo Cárdena	ASESOR COMERCIAL	Nariño y Putumayo	321 799 79 06	rcampo@auteco.com.co
Uberney Ortiz Vélez	ASESOR COMERCIAL	Magdalena Medio	313 672 73 37	uortiz@auteco.com.co
William Gutiérrez	ASESOR COMERCIAL	Meta	310 407 40 72	wgutierrez@auteco.com.co
Sergio Restrepo Taborda	GERENTE CCIAL. REPUESTOS Y ACCS	Nacional	321 779 13 97	sgrestrepo@auteco.com.co
Daniel Ángel Neira	GERENTE CCIAL. ACCESORIOS	Nacional	313 716 85 65	dangel@auteco.com.co
Jhon Alexánder Estrada	JEFE CANAL CONCES. Y CSA	Nacional	311 737 37 48	jestrada@auteco.com.co
Juan Guillermo Ospina	JEFE CANAL MAYORISTA	Nacional	313 767 78 36	kgospina@auteco.com.co
Alejandro García P	Tutor CBU	Norte	320 682 0964	agarcia@auteco.com.co
Laura Ocampo	Tutor CBU	Sur	311 358 76 27	repuestoscbru@auteco.com.co

SERVICIO AL CLIENTE

LÍNEA ÚNICA DE SERVICIO AL CLIENTE CANAL (4) 444 81 90

UN DE REPUESTOS Y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO A CONCESIONARIO Y MAYORISTAS	WILLINGTON FRANCO	servicioadistribuidorseymayoristas@auteco.com.co		
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co		
COORDINADOR SERVICIO POSTVENTA	CARLOS ESTEBAN SUÁREZ	csuarez@auteco.com.co		(4) 373 83 94
GARANTÍAS	ALEJANDRO FERNÁNDEZ	garantias2@auteco.com.co		
DEVOLUCIONES - RECLAMOS	YUDY DUQUE	devolucionesrptos@auteco.com.co		
MOTO FUERA DE RUTA	RICARDO CUARTAS	motofueraderuta@auteco.com.co		(4) 306 84 86
LÍNEA DE ATENCIÓN AL CLIENTE	DANIEL RINCÓN		(4) 444 81 90	
	SERGIO OSORNO			
CARTERA		cartera@auteco.com.co		(4) 277 51 17
				(4) 306 81 54
VENTA MOTOS		pedidomotos@auteco.com.co		(4) 372 62 95

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LÍNEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA No.	DESCRIPCIÓN	PÁG. No.
1	CULATA	1
2	MÚLTIPLE ADMISIÓN	2
3	VÁLVULAS	3
4	EJE LEVAS / TENSOR CADENILLA	4
5	CILINDRO / PISTÓN	5
6	CIGÜEÑAL	6
7	EJE BALANCEADOR	7
8	TRANSMISIÓN	8
9	SECTOR DE CAMBIOS	9
10	EJE DE CAMBIOS	10
11	CARCASA DERECHA	11
12	CARCASA IZQUIERDA	12
13	CUBIERTA CLUTCH	13
14	CUBIERTA VOLANTE / CUBIERTA CADENA	14
15	CLUTCH (PRENSA DE 4 RESORTES)	15
15A	CLUTCH (PRENSA DE 5 RESORTES)	16
16	RADIADOR	17
17	CARBURADOR	18
18	FILTRO DE AIRE	19
19	SILENCIADOR	20
20	SILLÍN	21
21	BOMBA DE ACEITE	22
22	MAGNETO / C.D.I. / BOBINA DE ALTA	23
23	MOTOR DE ARRANQUE	24
24	PARTES DEL CHASIS	25
25	CHASIS	26

FIGURA No.	DESCRIPCIÓN	PÁG. No.
26	AMORTIGUADOR TRAS. / BRAZO OSCILANTE	27
27	REPOSAPIE CONDUCTOR	28
28	REPOSAPIE PASAJERO	29
29	GUARDABARRO TRASERO	30
30	GATO CENTRAL- GATO LATERAL	31
31	LLANTAS / RINES	32
32	RUEDA DELANTERA	33
33	BOMBA FRENO DELANTERO	34
34	FRENO DISCO DELANTERO	35
35	RUEDA TRASERA	36-37
36	PEDAL FRENO	38
37	MANUBRIO	39-40
38	SUSPENSIÓN DELANTERA	41
39	TANQUE GASOLINA / TAPAS LATERALES	42
40	GRIFO DE GASOLINA	43
41	ANTIVIBRANTES TANQUE GASOLINA Y TAPAS LATERALES	44
42	VELOCÍMETRO	45
43	CABLES / GUARDA CADENA	46
44	FAROLA	47
45	DIRECCIONALES	48
46	STOP / PORTA PLACA	49
47	EQUIPO ETÉCTRICO	50
48	ACCESORIOS / HERRAMIENTAS	51
	LISTA DE KITS	52-53
	NOTAS IMPORTANTES	54
	INDICE DE REFERENCIAS	55-59

Esta publicación contiene las referencias para los vehículos ensamblados a partir del **MOTOR No. JCGBRC17185 (CHASÍS No. MD2JCB1Z09VC00894)**.

ÍNDICE DE GRÁFICOS

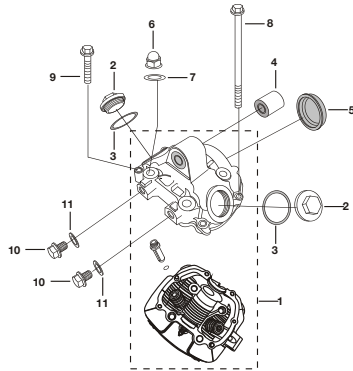


FIGURA N° 1 : CULATA

PÁG. No.
1

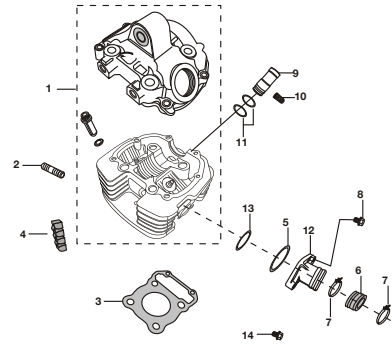


FIGURA N° 2 : MÚLTIPLE ADMISIÓN

PÁG. No.
2

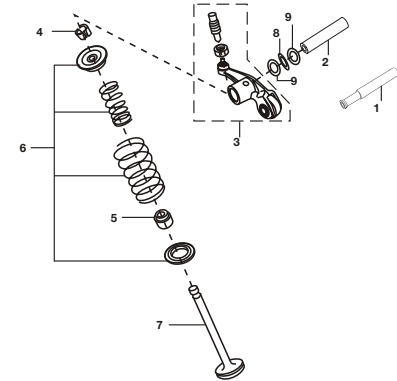


FIGURA N° 3 : VÁLVULAS

PÁG. No.
3

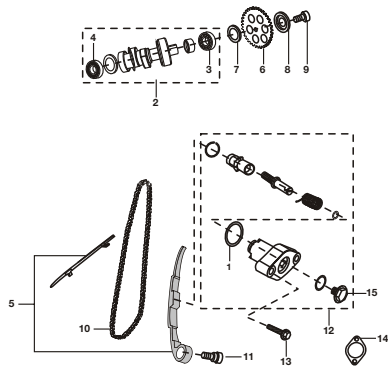


FIGURA N° 4 : EJE LEVAS / TENSOR CADENILLA

PÁG. No.
4

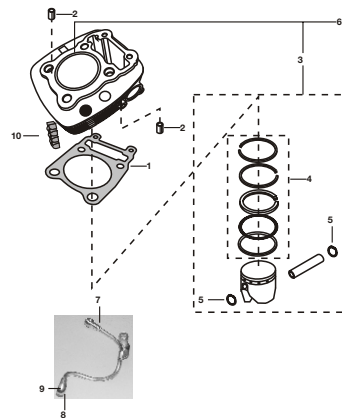


FIGURA N° 5 : CILINDRO / PISTÓN

PÁG. No.
5

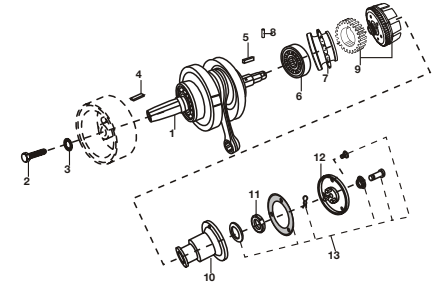


FIGURA N° 6 : CIGÜEÑAL

PÁG. No.
6

ÍNDICE DE GRÁFICOS

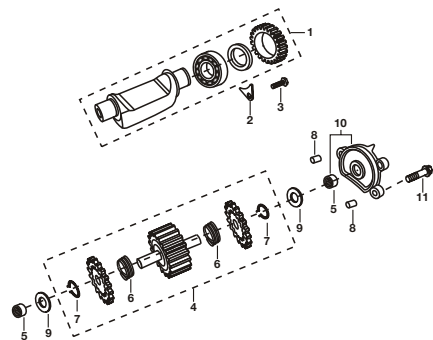


FIGURA N° 7 : EJE BALANCEADOR

PÁG. No.
7

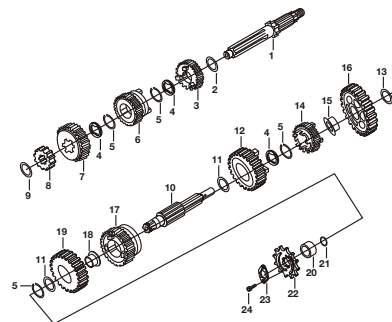


FIGURA N° 8 : TRANSMISIÓN

PÁG. No.
8

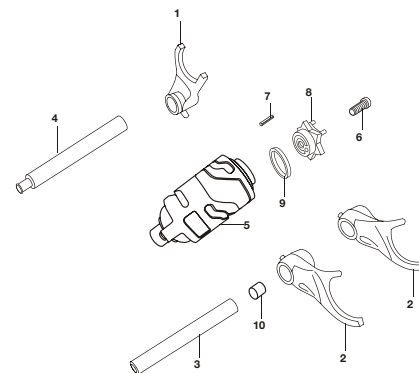


FIGURA N° 9 : SELECTOR DE CAMBIOS

PÁG. No.
9

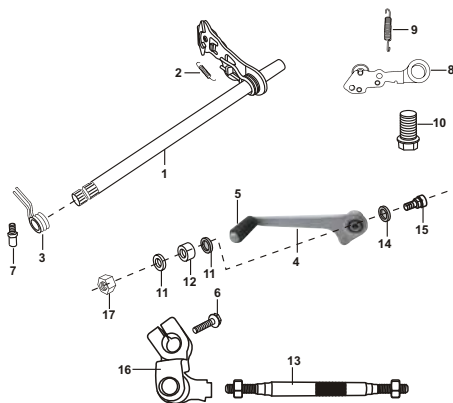


FIGURA N° 10 : EJE DE CAMBIOS

PÁG. No.
10

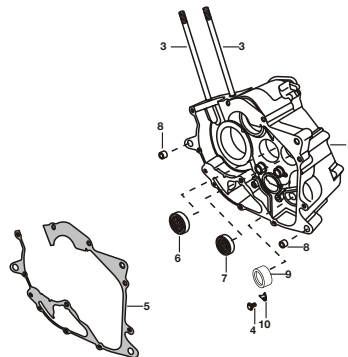


FIGURA N° 11 : CARCASA DERECHA

PÁG. No.
11

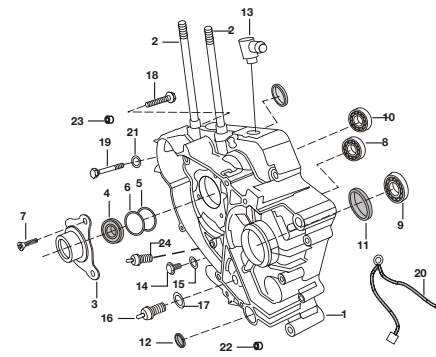


FIGURA N° 12 : CARCASA IZQUIERDA

PÁG. No.
12

ÍNDICE DE GRÁFICOS

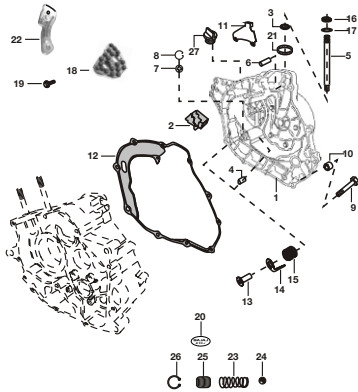


FIGURA N° 13 : CUBIERTA CLUTCH

PÁG. No.
13

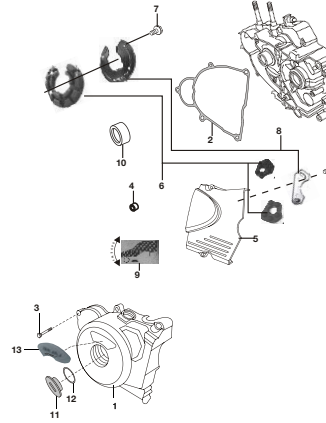


**FIGURA N° 14 : CUBIERTA VOLANTE /
CUBIERTA CADENA**

PÁG. No.
14

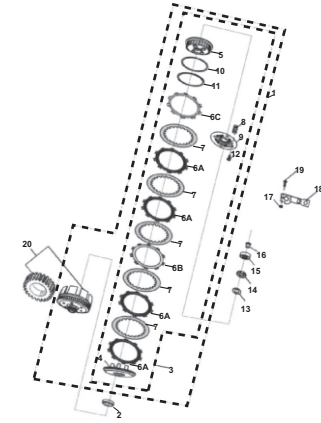


**FIGURA N° 15 : CLUTCH
(PRENSA DE 4 RESORTES)**

PÁG. No.
15

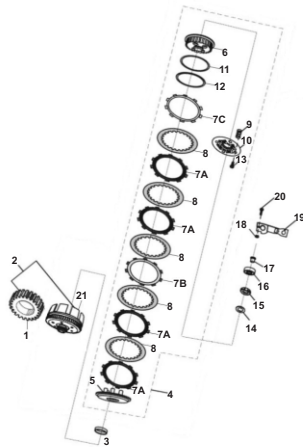


**FIGURA N° 15A : CLUTCH
(PRENSA DE 5 RESORTES)**

PÁG. No.
16

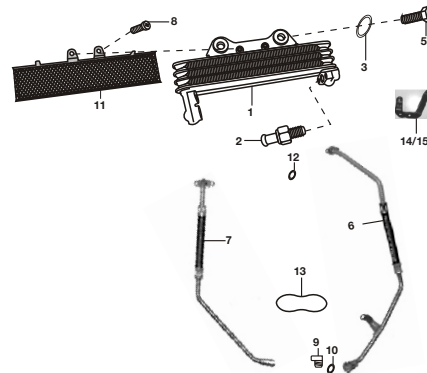


FIGURA N° 16 : RADIADOR

PÁG. No.
17

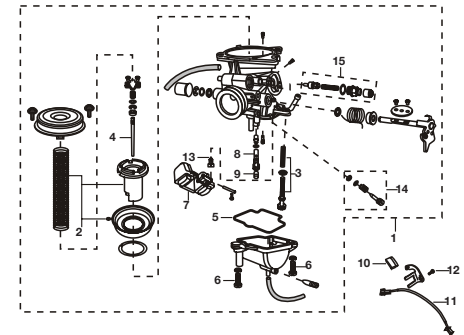
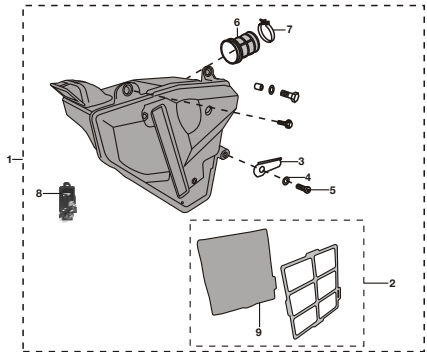
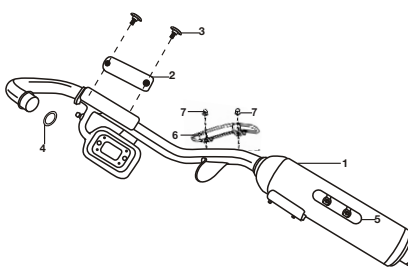
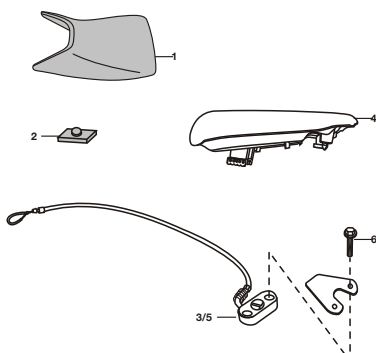
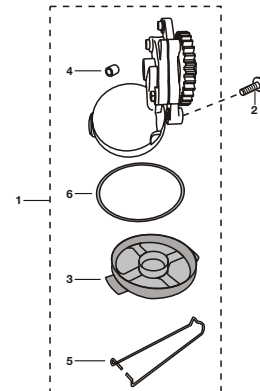
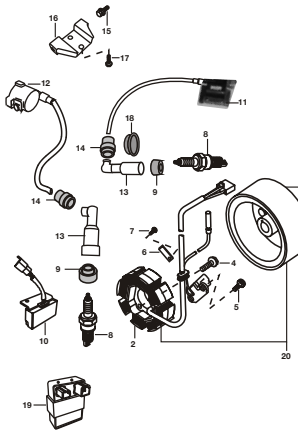
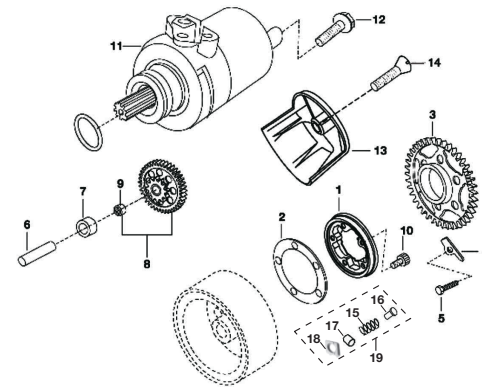








FIGURA N° 17 : CARBURADOR

PÁG. No.
18






ÍNDICE DE GRÁFICOS

	FIGURA N° 18 : FILTRO DE AIRE	PÁG. No. 19		FIGURA N° 19 : SILENCIADOR	PÁG. No. 20		FIGURA N° 20 : SILLÍN	PÁG. No. 21
	FIGURA N° 21 : BOMBA DE ACEITE	PÁG. No. 22		FIGURA N° 22 : MAGNETO / C.D.I. / BOBINA DE ALTA	PÁG. No. 23		FIGURA N° 23 : MOTOR DE ARRANQUE	PÁG. No. 24

ÍNDICE DE GRÁFICOS

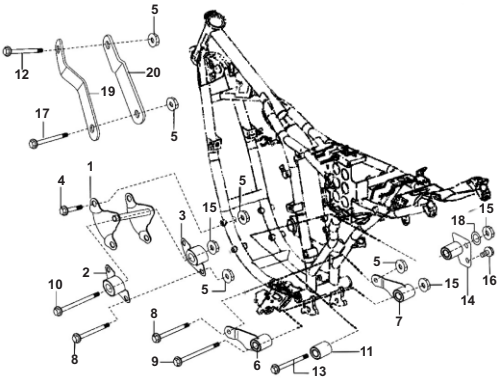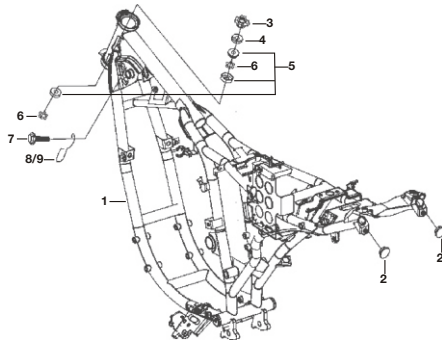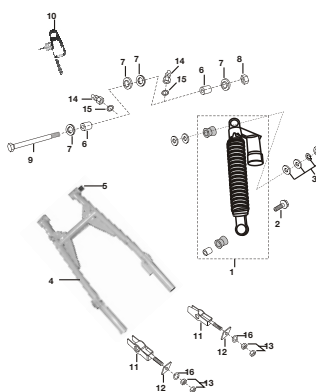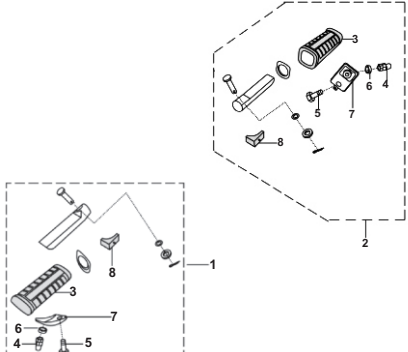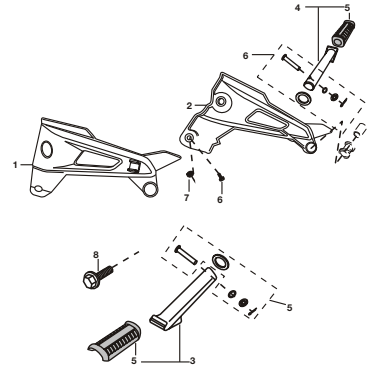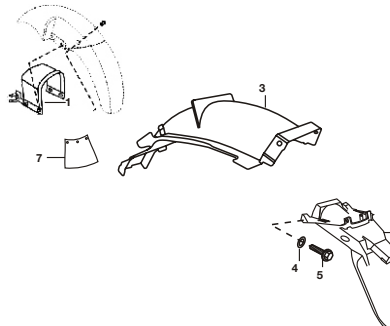		
FIGURA N° 24 : PARTES DEL CHASS	FIGURA N° 25 : CHASIS	FIGURA N° 26 : AMORTIGUADOR TRASERO / BRAZO OSCILANTE
		
FIGURA N° 27 : REPOSAPIE CONDUCTOR	FIGURA N° 28 : REPOSAPIE PASAJERO	FIGURA N° 29 : GUARDABARRO TRASERO

ÍNDICE DE GRÁFICOS

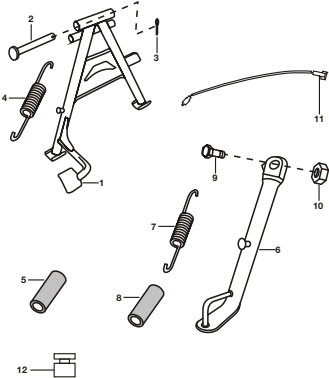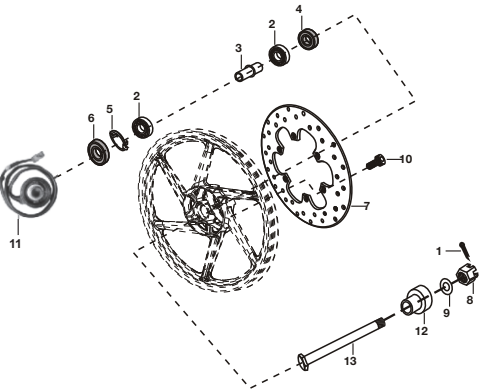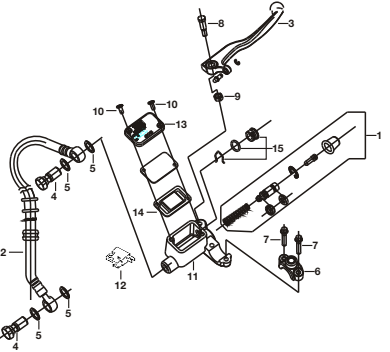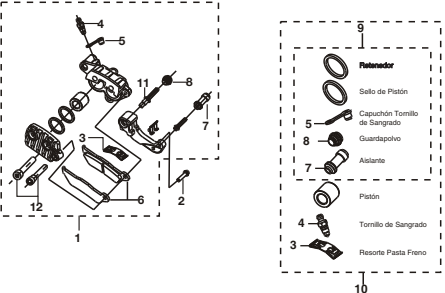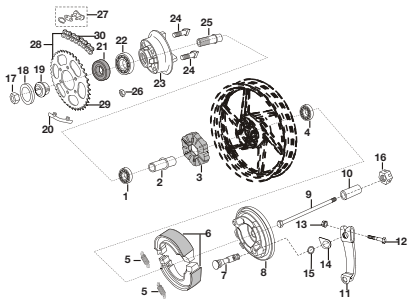	FIGURA N° 30 : GATO CENTRAL- GATO LATERAL PÁG. No. 31		FIGURA N° 31 : LLANTAS / RINES PÁG. No. 32		FIGURA N° 32 : RUEDA DELANTERA PÁG. No. 33
	FIGURA N° 33 : BOMBA FRENO DELANTERO PÁG. No. 34	 Detallado: - Sello de Piston - Capuchón Tornillo de Sangrado - Guardapolvo - Aislante - Piston - Tornillo de Sangrado - Resorte Pasta Freno	FIGURA N° 34 : FRENO DISCO DELANTERO PÁG. No. 35		FIGURA N° 35 : RUEDA TRASERA PÁG. No. 36-37

ÍNDICE DE GRÁFICOS

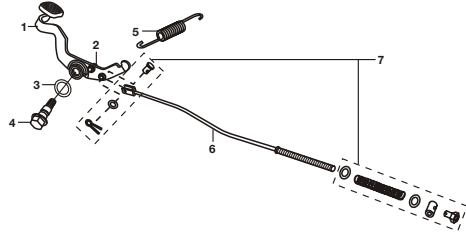


FIGURA N° 36 : PEDAL FRENO

PÁG. No.
38

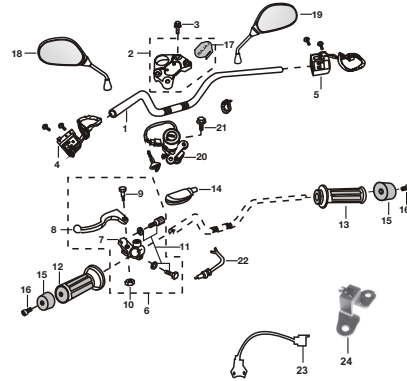


FIGURA N° 37: MANUBRIO

PÁG. No.
39-40

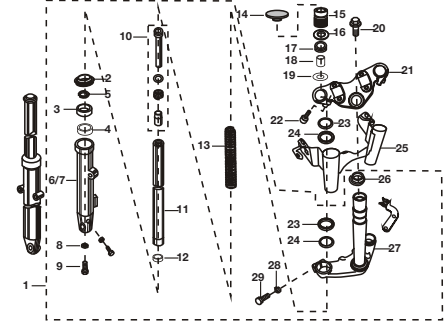


FIGURA N° 38: SUSPENSIÓN DELANTERA

PÁG. No.
41

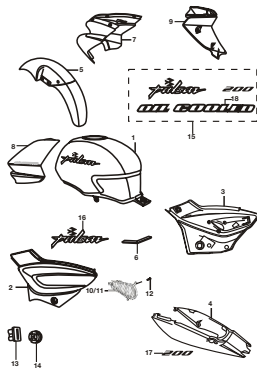


**FIGURA N° 39: TANQUE GASOLINA /
TAPAS LATERALES**

PÁG. No.
42

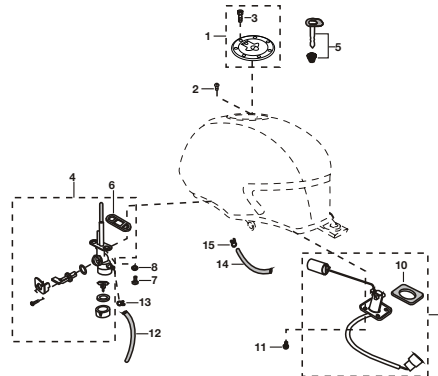


FIGURA N° 40: GRIFO DE GASOLINA

PÁG. No.
43

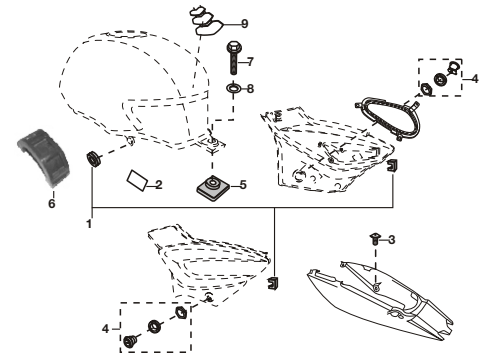


**FIGURA N° 41: ANTIVIBRANTES TANQUE
GASOLINA Y TAPAS LATERALES**

PÁG. No.
44

ÍNDICE DE GRÁFICOS

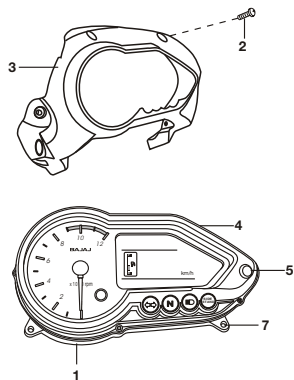


FIGURA N° 42: VELOCÍMETRO

PÁG. No.
45

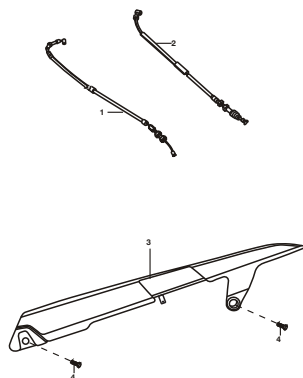


FIGURA N° 43: CABLES / GUARDACADENA

PÁG. No.
46



FIGURA N° 44 : FAROLA

PÁG. No.
47

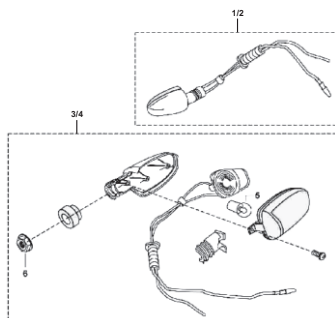


FIGURA N° 45 : DIRECCIONALES

PÁG. No.
48

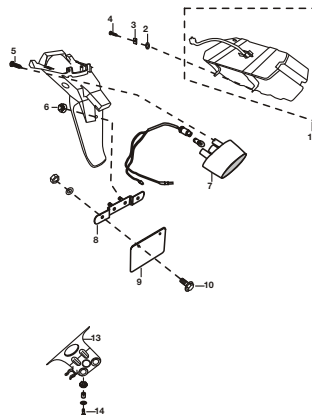


FIGURA N° 46 : STOP / PORTA PLACA

PÁG. No.
49

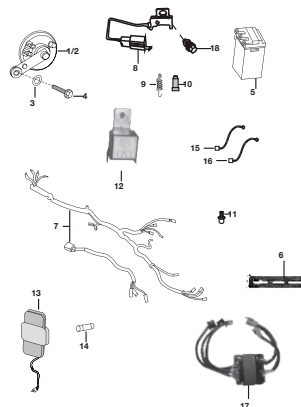


FIGURA N° 47 : EQUIPO ELÉCTRICO

PÁG. No.
50

ÍNDICE DE GRÁFICOS

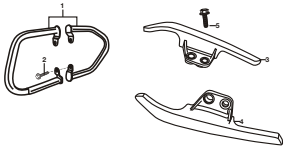


FIGURA N° 48 : ACCESORIOS /
HERRAMIENTAS

PÁG. No.
51

This exploded view diagram illustrates the assembly of a carburetor. The main body is labeled 1. Key components shown include:

- Part 2: Two different types of O-rings or seals.
- Part 3: A gasket or spacer plate.
- Part 4: A cylindrical jet needle.
- Part 5: A circular air filter or cap.
- Part 6: A small plug or pin.
- Part 7: A small washer or spacer.
- Part 8: A long, thin screw or pin.
- Part 9: A long screw with a hex head.
- Part 10: Two different types of screws or bolts.
- Part 11: Two different types of washers or spacers.

 The diagram shows the relative positions of these parts as they are assembled onto the carburetor body (1). A dashed line indicates the internal components of the carburetor body.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a carburetor. The components are numbered as follows:

- 1**: Points to the upper carburetor body.
- 2**: A long screw for the float bowl.
- 3**: A gasket for the float bowl.
- 4**: A float bowl.
- 5**: A diaphragm for the accelerator pump.
- 6**: A jet needle.
- 7**: A jet needle seal.
- 8**: A jet needle holder.
- 9**: A jet needle holder screw.
- 10**: A jet needle holder pin.
- 11**: A jet needle holder pin.
- 12**: The jet needle holder assembly.
- 13**: A diaphragm for the float valve.
- 14**: A float valve pin.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a mechanical component, likely a shock absorber or suspension part, showing the relationship between various components. The parts are numbered as follows:

- 1**: A long, thin cylindrical rod or shaft.
- 2**: A short cylindrical sleeve or bush.
- 3**: A complex bracket or housing with mounting points.
- 4**: A small nut or cap screw.
- 5**: A small cylindrical bush or spacer.
- 6**: A large, multi-coiled spring.
- 7**: A long, tapered rod or shaft with a flange at one end.
- 8**: A small washer or spacer ring.
- 9**: A small washer or spacer ring.

The assembly sequence is indicated by dashed lines and arrows:

- Part **1** is shown at the bottom right, with a dashed line indicating its insertion into the lower part of the assembly.
- Part **2** is shown above part **1**, with a dashed line indicating its placement over the rod.
- Part **3** is shown in the center, with a dashed line indicating its attachment to the rod assembly.
- Part **4** is shown above part **3**, with a dashed line indicating its placement to secure the bracket.
- Part **5** is shown below part **3**, with a dashed line indicating its placement between the bracket and the spring.
- Part **6** is shown in the middle, with a dashed line indicating its placement over the rod and bush.
- Part **7** is shown at the bottom, with a dashed line indicating its insertion into the lower part of the assembly.
- Parts **8** and **9** are shown to the right of part **3**, with dashed lines indicating their placement as spacers or washers.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a mechanical component, likely a pump or motor. The components are numbered 1 through 15. The assembly is shown in an exploded view, with dashed lines indicating the alignment and sequence of assembly. The main assembly consists of a central shaft (1) with a pulley (2) and a gear (3). A timing belt (4) is shown around the pulley. A timing chain (5) is shown around the gear. A timing cover (6) is shown with a timing belt (7) and a timing chain (8). A timing cover (9) is shown with a timing belt (10) and a timing chain (11). A timing cover (12) is shown with a timing belt (13) and a timing chain (14). A timing cover (15) is shown with a timing belt (16) and a timing chain (17).

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a piston and connecting rod. The components are labeled as follows:

- 1**: Piston crown and skirt assembly.
- 2**: Piston rings (two shown).
- 3**: Piston pin.
- 4**: Piston pin clip.
- 5**: Piston pin bush (two shown).
- 6**: Piston pin clip (top view).
- 7**: Connecting rod.
- 8**: Connecting rod pin.
- 9**: Connecting rod pin bush.
- 10**: Piston pin clip (side view).

BAJAJ
Pulsar 200 OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The components are numbered 1 through 19. The main assembly consists of a central shaft (1) with a pulley (2) and a gear (3) mounted on it. A bracket (4) is attached to the shaft. A pin (5) is used to secure the assembly. A gear (6) is mounted on the shaft, and a pin (7) is used to secure it. A gear (8) is mounted on the shaft, and a pin (9) is used to secure it. A gear (10) is mounted on the shaft, and a pin (11) is used to secure it. A gear (12) is mounted on the shaft, and a pin (13) is used to secure it. A gear (14) is mounted on the shaft, and a pin (15) is used to secure it. A gear (16) is mounted on the shaft, and a pin (17) is used to secure it. A gear (18) is mounted on the shaft, and a pin (19) is used to secure it.

BAJAJ
Pulsar *200* OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor. The parts are numbered 1 through 11. The assembly is shown in two main sections, each enclosed in a dashed box. The top section shows a shaft assembly (1) with a bearing (2) and a pin (3). The bottom section shows a gear assembly (4) with a gear (6) and a pin (7). The gear assembly is connected to a housing (10) via a shaft (5) and a pin (8). The housing is secured with a bolt (11).

BAJAJ
pulsar *200* OIL/COOLED

FIGURA N° 8 : TRANSMISIÓN

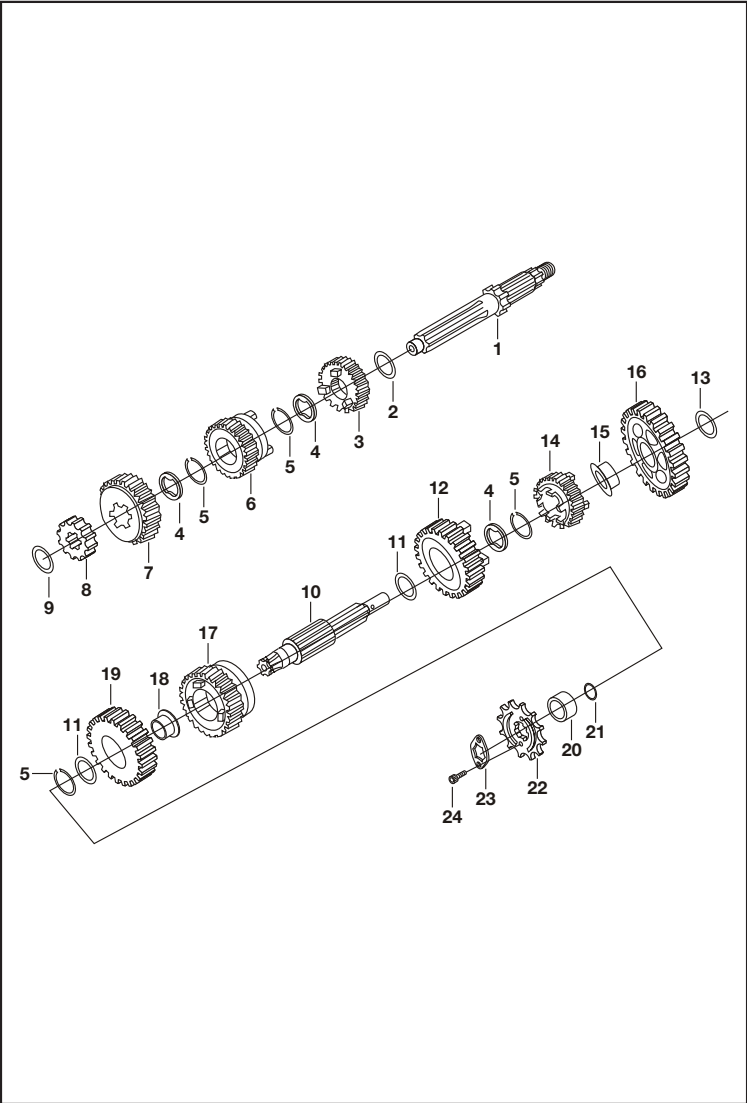


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DK101125	Eje Clutch	1	
2	39215811	Arandela Eje Caja	2	
3	DK101103	Piñón de 4a	1	
4	DH101079	Arandela Caja	3	
5	DH101235	Pin Piñones Caja	4	
6	DK101102	Piñón de 3a	1	
7	DK101104	Piñón de 5a	1	
8	DH101084	Piñón de 2a	1	
9	39216011	Arandela Caja	1	
10	DK101145	Eje Piñón Salida	1	
11	DH101336	Arandela Caja	2	
12	DK101105	Piñón de 3a	1	
13	DH101079	Arandela Caja	2	
14	DK101106	Piñón de 4a	1	
15	DH101111	Buje Piñón Caja	1	
16	DK101118	Piñón de 1a	1	
17	DK101107	Piñón de 5a	1	
18	DH101319	Buje Piñón Caja	1	
19	DH101333	Piñón de 2a	1	
20	DK101245	Buje Eje Piñón Salida	1	
21	30101061	Anillo Retenedor	1	
22	DV101048	Piñón de Salida	1	
23	DJ101063	Arandela Seguridad Piñón Salida	1	
24	39106204	Tornillo	2	

This diagram illustrates the exploded view of a bicycle seatpost assembly. The components are numbered as follows:

- 1**: A curved seatpost clamp or bracket.
- 2**: Two identical curved seatpost clamps or brackets.
- 3**: A long, straight seatpost tube.
- 4**: A shorter, straight seatpost tube or sleeve.
- 5**: A seatpost clamp or bracket with a central slot.
- 6**: A small, threaded bolt or screw.
- 7**: A small, flat washer or spacer.
- 8**: A circular seatpost clamp or bracket.
- 9**: A circular seatpost clamp or bracket.
- 10**: A small, cylindrical cap or plug.

BAJAJ
Pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the components of a rear suspension system. The parts are numbered as follows:

- 1**: A long, tapered shock absorber body.
- 2**: A small pin or clip located near the top of the shock absorber.
- 3**: A small cylindrical component, likely a bush or spacer.
- 4**: A L-shaped control arm.
- 5**: A small pin or clip located near the top of the control arm.
- 6**: A small bolt or screw.
- 7**: A small cylindrical component, likely a bush or spacer.
- 8**: A small metal bracket or plate.
- 9**: A small spring or clip.
- 10**: A small cylindrical component, likely a bush or spacer.
- 11**: A small cylindrical component, likely a bush or spacer.
- 12**: A small cylindrical component, likely a bush or spacer.
- 13**: A long, cylindrical component, likely a shock absorber rod or pin.
- 14**: A small cylindrical component, likely a bush or spacer.
- 15**: A small bolt or screw.
- 16**: A large metal bracket or plate, likely a lower control arm bracket.
- 17**: A small cylindrical component, likely a bush or spacer.

The diagram shows the assembly sequence with dashed lines indicating the alignment of the components. The shock absorber (1) is shown with the control arm (4) and the lower control arm bracket (16) attached. The control arm (4) is shown with the shock absorber rod (13) and the lower control arm bracket (16) attached. The lower control arm bracket (16) is shown with the shock absorber rod (13) and the lower control arm bracket (16) attached.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a mechanical component, likely a pump or valve housing. The main housing is shown in an exploded view, revealing internal components. The parts are numbered as follows:

- 1**: A large, irregularly shaped gasket or seal plate with multiple mounting holes.
- 2**: The main housing or body of the assembly.
- 3**: Two long, threaded rods or screws used for securing the assembly.
- 4**: A small pin or clip used for fastening.
- 5**: A small, circular component, possibly a seal or O-ring.
- 6**: A circular component with a textured surface, likely a filter or a specific type of seal.
- 7**: Another circular component, similar to 6 but with a different internal structure.
- 8**: A small, cylindrical component, possibly a pin or a small bearing.
- 9**: A small, cylindrical component, possibly a pin or a small bearing.
- 10**: A small, cylindrical component, possibly a pin or a small bearing.

Dashed lines indicate the assembly path and the relative positions of the components. The diagram shows how the gasket (1) fits into the housing (2), and how the various seals and pins (5, 6, 7, 8, 9, 10) are installed to complete the assembly.

BAJAJ
Pulsar *200* OIL/COOLED

FIGURA N° 12 : CARCASA IZQUIERDA

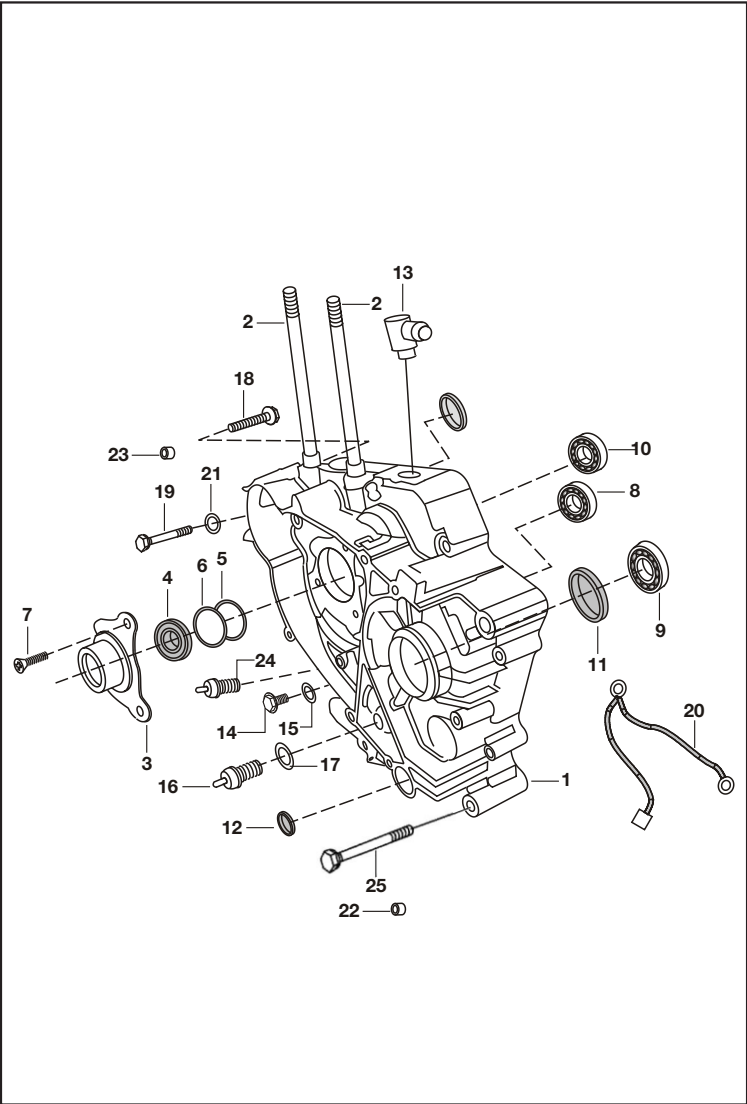


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC101016	Carcasa Izquierda	1	
	JC101045		1	Desde Abril 2009
2	59050008	Espárragos Cilindro	2	
3	DK101094	Platina Motor Arranque	1	
4	39218819	Retén Cigüeñal (22-35-7)	1	
5	59210006	Anillo Retén	1	
6	DK101097	Antivibrante	1	
7	39075201	Tornillo	3	
8	39260320	Rodamiento Bolas Clutch	1	
9	59200006	Rodamiento Bolas Eje Salida	1	
10	39218520	Rodamiento Bolas Izq. Balanceador	1	
11	30101014	Retén Eje Salida	1	
12	39219019	Retén Eje Cambios (12-22-9)	1	
13	DH101203	Conducto Aire	1	
14	DH101661	Tapón Drenaje Aceite	1	
15	31101106	Arandela Tapón Drenaje	1	
16	31201081	Swiche Neutro	1	
	DK101380	(No Intercambiable)	1	Desde Abril 2009
17	DH101784	Junta Swiche Neutro	1	Alt. 39101321
18	39184504	Tornillo 6x45	8	
19	39230504	Tornillo	1	
20	DJ201021	Cable Batería	1	
21	39244811	Arandela Tapón Drenaje	1	
22	39218006	Pin Guía Carcasa	2	
23	39218106	Pin Guía Carcasa	2	
24	DK101124	Sensor Térmico Con Empaque	1	
25	39167704	Tornillo 6 x 45	1	

FIGURA N° 13 : CUBIERTA CLUTCH

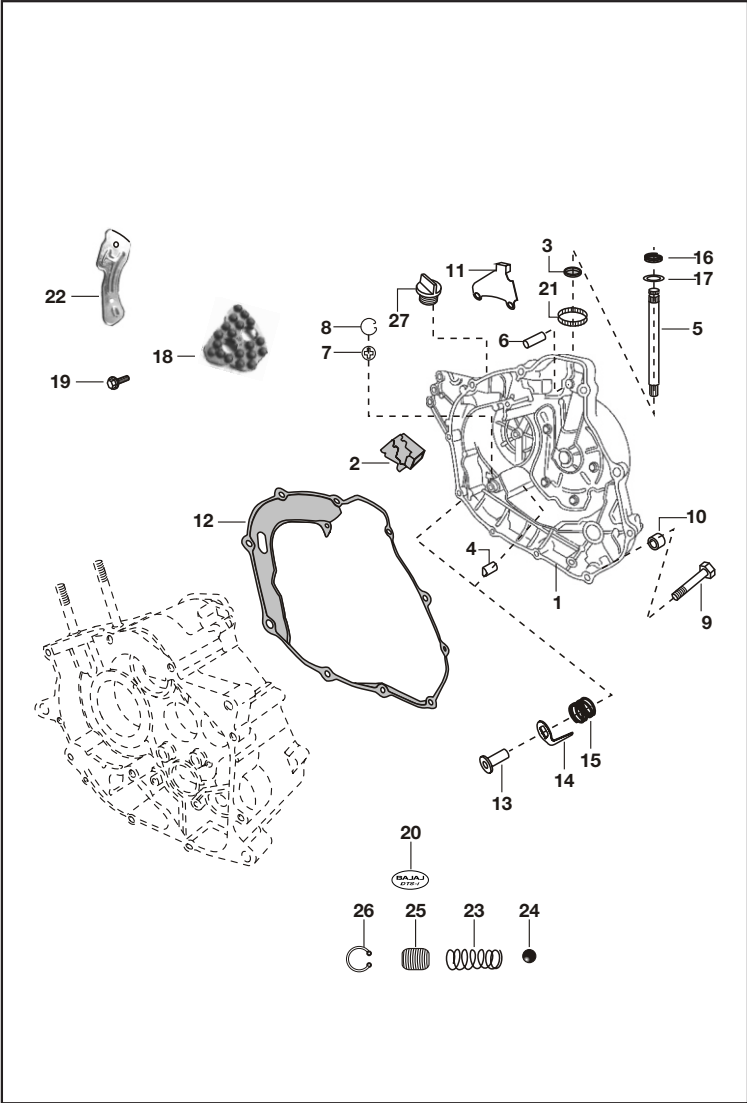


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC101030	Cubierta Clutch	1	
2	DH101197	Antivibrante Carcasa	1	
3	39104119	Retén Eje Leva De Clutch	1	
4	DH101141	Empujador Clutch	1	
5	DH101142	Eje Clutch	1	
6	DK101251	Pin Eje Clutch	1	
7	DG101418	Visor Nivel Aceite	1	
8	DS101215	Pin Seguridad	1	
9	DS101353	Tornillo	10	
10	39099906	Pin Guía Carcasa	2	
11	DK101252	Soporte Cable Clutch	1	
12	DH101154	Junta Cubierta Clutch	1	
13	DH121015	Tapón Aceite	1	
14	DH121011	Platina Tapón Aceite	1	
15	DH121012	Resorte	1	
16	DH101544	Resorte Eje Clutch	1	
17	39244311	Arandela	1	
18	DH101510	Antivibrante	1	
19	DH101388	Tornillo	8	
20	JC101040	Calcomanía Cubierta Clutch	1	
21	39199020	Rodamiento	2	
22	DH101482	Platina	1	
23	DK101122	Resorte	1	
24	30101236	Balín	1	
25	DK101123	Válvula Presión	1	
26	39254717	Pin Seguridad	1	
27	DS101263	Tapón Aceite	1	

This exploded view diagram illustrates the assembly of a motorcycle engine. The components are numbered as follows:

- 1**: Main engine block/cylinder assembly.
- 2**: Oil pan gasket.
- 3**: Bolt for the timing cover.
- 4**: Small bolt/screw.
- 5**: Timing cover.
- 6**: Main engine block/cylinder assembly (shown in two positions).
- 7**: Bolt for the timing cover.
- 8**: Timing cover gasket.
- 9**: Timing cover gasket (shown in two positions).
- 10**: Oil pan gasket.
- 11**: Oil pan.
- 12**: Oil pan gasket.
- 13**: Timing cover gasket.

The diagram shows the engine block (1) with the timing cover (5) and oil pan (11) being attached. The gaskets (2, 8, 9, 10, 12, 13) are shown in their respective positions between the components. The bolts (3, 4, 7) are shown being inserted into the assembly. A small inset diagram shows the timing cover (5) being attached to the engine block (1) with a bolt (3).

BAJAJ
pulsar₂₀₀ OIL/COOLED

FIGURA N° 15 : CLUTCH (PRENSA DE 4 RESORTES)

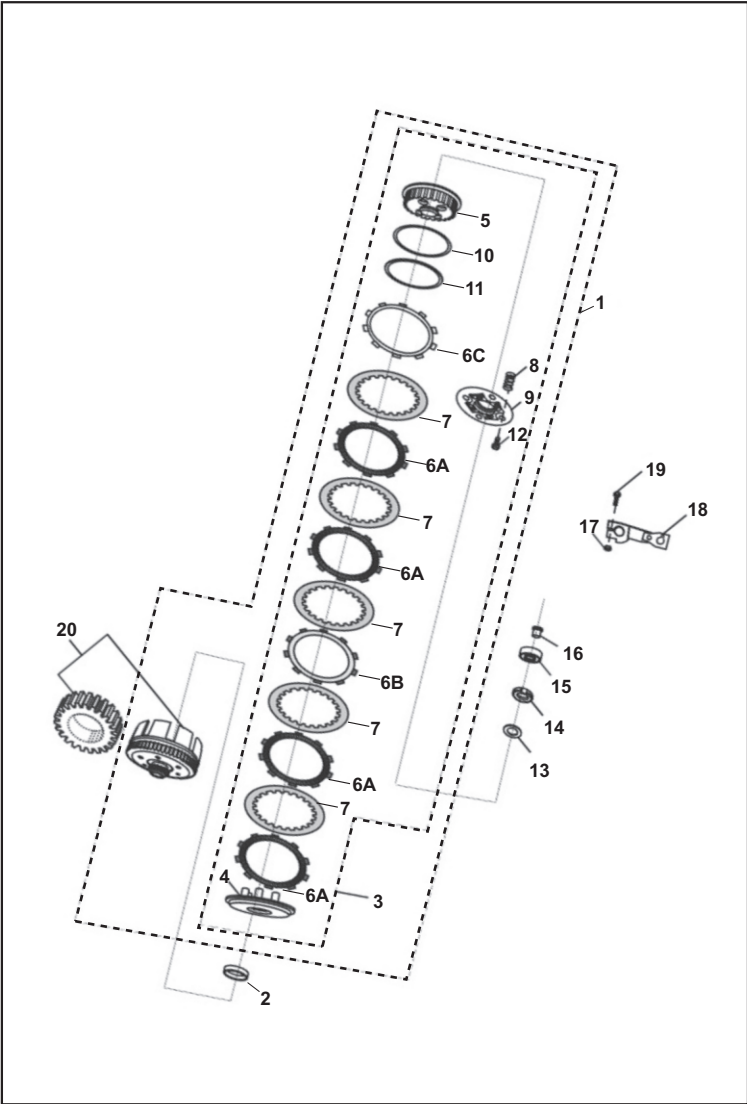


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DK101073	Clutch Completo	1	
2	DK101126	Espaciador Clutch	1	
3	DK101075	Clutch Completo Sin Corona	1	
4	DK101163	Base Prensa Clutch	1	
5	DK101001	Corona Interna Clutch	1	
6	DK101356	Kit Discos Clutch	1	Items: 6A, 6B y 6C
6A	DK101149	Disco Clutch "A" de 36 Corchos	4	
6B	DK101150	Disco Clutch "B" de 40 Corchos	1	
6C	DK101255	Disco Clutch "C" de 48 Corchos	1	
7	DK101151	Separador Clutch	5	Alt. DH101743
8	DK101152	Resortes Clutch	4	
9	DK101078	Empujador Clutch	1	
10	DK101153	Arandela Anti-brinco Plana	1	
11	DK101155	Arandela Anti-brinco Concava	1	
12	DK101154	Tornillo	4	
13	39220011	Arandela Especial	1	
14	DH101648	Tuerca Izquierda	1	
15	39188020	Rodamiento Clutch	1	
16	DK101072	Empujador	1	
17	DH101275	Tuerca Eje Clutch	1	
18	DH101180	Leva Clutch	1	
	DK101636	Leva Clutch	1	Desde Julio 09
19	39167404	Tornillo Leva Clutch	1	
20	36DK0029	Kit Corona y Piñón Primario	1	

FIGURA N° 15A : CLUTCH (PRENSA DE 5 RESORTES)

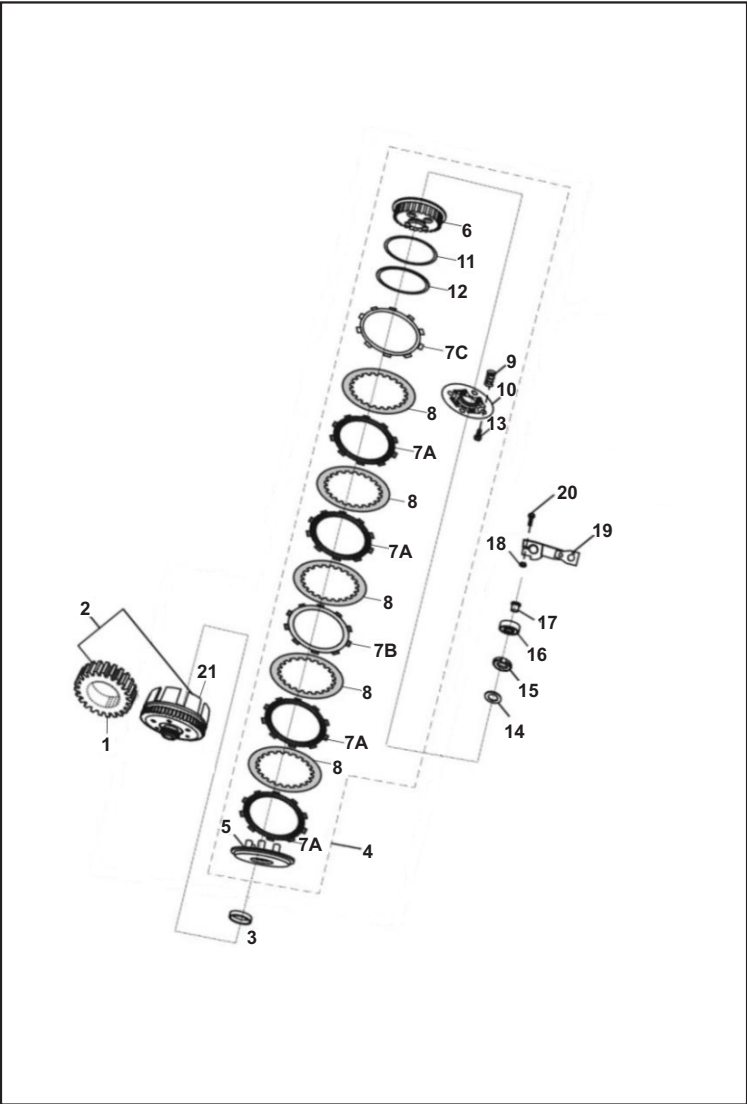


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DH101628	Piñon Primario	1	
2	36DK0038	Kit Corona y Piñon Primario	1	
3	DK101126	Espaciador Clutch	1	
4	DJ101350	Clutch Completo Sin Corona	1	
5	DK101569	Base Prensa Clutch	1	
6	DK101564	Corona Interna Clutch	1	
7	DJ101369	Kit Discos Clutch	1	(Items: 7A, 7B y 7C)
7A	DK101566	Disco Clutch "A" de 36 Corchos	4	
7B	DK101568	Disco Clutch "B" de 40 Corchos	1	
7C	DK101567	Disco Clutch "C" de 48 Corchos	1	
8	DK101565	Separador Clutch	5	
9	DH101861	Resortes Clutch	5	
10	DK101573	Empujador Clutch	1	
11	DK101570	Arandela Anti-brinco Plana	1	
12	DK101571	Arandela Anti-brinco Concava	1	
13	DK101574	Tornillo	5	
14	39220011	Arandela Especial	1	
15	DH101520	Tuerca Izquierda	1	
16	39188020	Rodamiento Clutch	1	
17	DK101072	Empujador	1	
18	DH101275	Tuerca Eje Clutch	1	
19	DH101180	Leva Clutch	1	
20	DK101574	Tornillo Leva Clutch	1	
21	DK101561	Corona Clutch (Sola)	1	

BAJAJ
pulsar *200* OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or valve. The parts are numbered as follows:

- 1:** The main housing or body of the assembly.
- 2:** A cylindrical component, possibly a filter or a seal, located below the main housing.
- 3:** A vertical rod or shaft passing through the center of the assembly.
- 4:** A small, circular component, possibly a cap or a seal, located above the main housing.
- 5:** A rectangular component, possibly a filter or a seal, located below the main housing.
- 6:** A small, circular component, possibly a cap or a seal, located below the main housing.
- 7:** A small, rectangular component, possibly a seal or a gasket, located below the main housing.
- 8:** A small, circular component, possibly a cap or a seal, located below the main housing.
- 9:** A small, rectangular component, possibly a seal or a gasket, located below the main housing.
- 10:** A small, rectangular component, possibly a seal or a gasket, located below the main housing.
- 11:** A cable or hose with a connector, located to the right of the main housing.
- 12:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.
- 13:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.
- 14:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.
- 15:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.
- 16:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.
- 17:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.
- 18:** A small, rectangular component, possibly a seal or a gasket, located to the right of the main housing.

BAJAJ
pulsar₂₀₀ OIL/COOLED

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the exploded view of a power tool handle assembly. The components are numbered as follows:

- 1**: The main handle body, featuring a trigger switch mechanism.
- 2**: A rectangular component, likely a battery pack or a mounting bracket, designed to attach to the handle.
- 3**: A small circular cap or plug used to secure the component in place.
- 4**: A small O-ring or seal, positioned to provide a watertight seal between the handle and the component.
- 5**: A small screw or fastener used to secure the trigger switch mechanism.
- 6**: The trigger switch lever, which is part of the power control system.
- 7**: Small screws or fasteners used to secure the trigger switch mechanism.
- 8**: A long, thin, curved component, possibly a grip or a protective sheath, designed to fit over the handle.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the components of a car seat headrest assembly. The parts are numbered as follows:

- 1**: A large, contoured, light-colored plastic headrest shell.
- 2**: A small, dark rectangular base plate with a circular stud in the center.
- 3/5**: A white plastic mounting bracket with two circular slots and a cable attachment point.
- 4**: A long, thin, light-colored plastic rail or support bar.
- 6**: A small metal bolt or screw with a hexagonal head.

The diagram shows the relative positions of these parts for assembly. Dashed lines indicate the alignment and insertion points for the bolt (6) into the bracket (3/5) and the rail (4).

BAJAJ
pulsar *200* OIL/COOLED

This diagram illustrates the assembly of various components for a vehicle, likely a motorcycle or small car. The parts are numbered 1 through 20:

- 1**: A small electrical connector or plug.
- 2**: The engine block.
- 3**: A large circular component, possibly a headlight or a large fan.
- 4**: A small electrical connector or plug.
- 5**: A small screw or bolt.
- 6**: A small electrical connector or plug.
- 7**: A small screw or bolt.
- 8**: A spark plug.
- 9**: A small circular component, possibly a gasket or a filter.
- 10**: A rectangular component, possibly a battery or a control unit.
- 11**: A rectangular component, possibly a battery or a control unit.
- 12**: A cable with a connector, possibly a fuel line or a sensor cable.
- 13**: A small electrical connector or plug.
- 14**: A small electrical connector or plug.
- 15**: A small screw or bolt.
- 16**: A small electrical connector or plug.
- 17**: A small screw or bolt.
- 18**: A small circular component, possibly a gasket or a filter.
- 19**: A rectangular component, possibly a battery or a control unit.
- 20**: A cable with a connector, possibly a fuel line or a sensor cable.

BAJAJ
Pulsar *200* OIL/COOLED

FIGURA N° 23 : MOTOR DE ARRANQUE

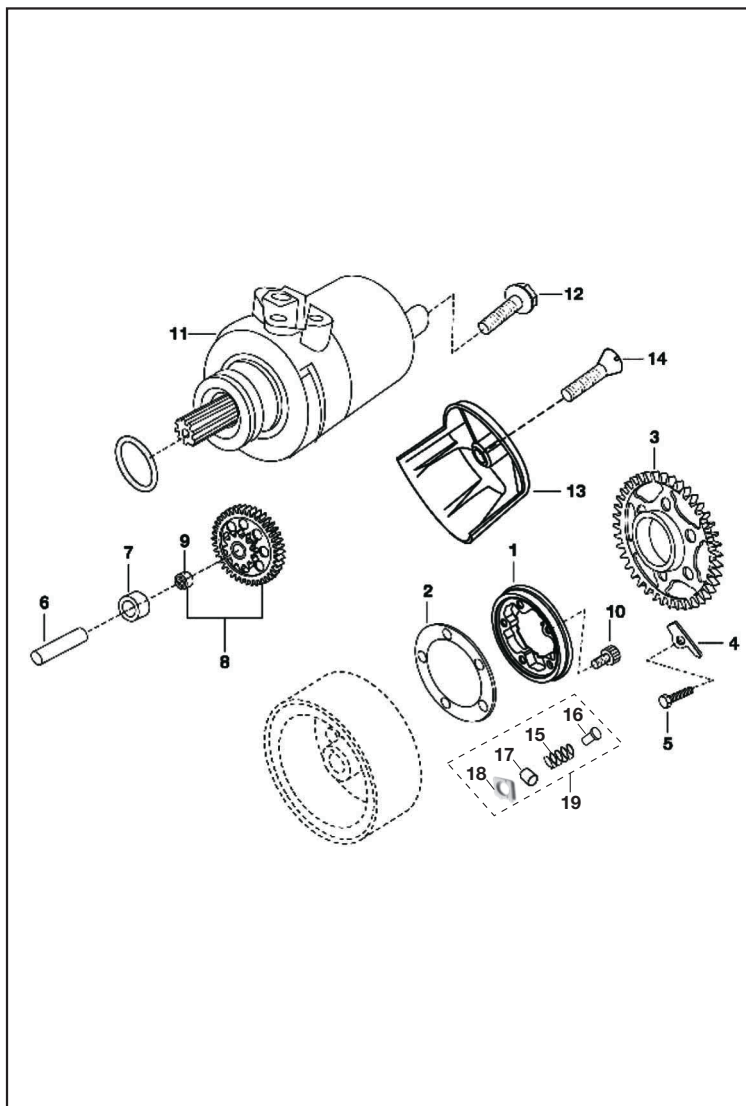


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DH101782	Clutch de una Vía	1	
	DK101595	(Intercambiable)	1	Desde Junio 2009
2	DH101781	Platina	1	
	DK101605	(No Intercambiable)	1	Desde Junio 2009
3	DH101658	Piñón Motor Arranque	1	
4	DH101581	Platina Motor Arranque	1	
5	DH101385	Tornillo	1	
6	DK101176	Pasador Piñón Motor Arranque	1	
7	DH101172	Buje Pasador	1	
8	DH101188	Piñón Motor Arranque	1	
9	59200007	Canastilla Guía Arranque	1	
10	DH101382	Tornillo	3	
11	JC111007	Motor Arranque	1	
12	DS101353	Tornillo	2	
13	DJ101278	Cubierta Motor Arranque	1	
14	DH101389	Tornillo	1	
15	DH101164	Resorte	5	Para DH101782
	DK101596	(No Intercambiable)	5	Desde Junio 2009
16	DJ101109	Buje Resorte Arranque	5	Para DH101782
17	DH101163	Pin Pasador	5	
18	DH101533	Buje Resortes Motor Arranque	5	Para DH101782
19	36DH4007	Kit Bujes Clutch de una Vía	5	Para DH101782

This is a technical exploded view diagram of a mechanical assembly, possibly a motorcycle engine or transmission component. The diagram illustrates the relationship between various parts, which are numbered 1 through 20. The components include:

- 1**: A small bracket or support piece.
- 2**: A bolt or screw.
- 3**: A small cylindrical component, possibly a bush or spacer.
- 4**: A bolt or screw.
- 5**: Multiple instances of small circular components, likely washers or spacers.
- 6**: A larger cylindrical component, possibly a bearing or pulley.
- 7**: A bolt or screw.
- 8**: A bolt or screw.
- 9**: A bolt or screw.
- 10**: A long bolt or screw.
- 11**: A long bolt or screw.
- 12**: A bolt or screw.
- 13**: A bolt or screw.
- 14**: A bolt or screw.
- 15**: Multiple instances of small circular components, likely washers or spacers.
- 16**: A bolt or screw.
- 17**: A bolt or screw.
- 18**: A bolt or screw.
- 19**: A large, curved structural component, possibly a bracket or cover.
- 20**: A large, curved structural component, possibly a bracket or cover.

Dashed lines are used throughout the diagram to indicate the assembly sequence and the alignment of the parts. The main assembly is shown in a perspective view, with the exploded parts arranged around it to show their relative positions and how they fit together.

BAJAJ
Pulsar₂₀₀ OIL/COOLED

This diagram shows an exploded view of a mechanical assembly. The main component is a large, curved metal frame (1). At the top, there is a pivot point with a pin (3) and a nut (4). A bracket (5) is attached to the top of the frame. A cable or hose (6/10) is connected to the top of the frame. A small component (7) is attached to the side of the frame. A bracket (8/9) is attached to the bottom of the frame. At the bottom, there is a complex assembly of components, including a motor or actuator (2) and various mounting brackets and pins.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a vehicle suspension system. The components are numbered as follows:

- 1**: Coil spring assembly, including the spring, upper and lower control arms, and a shock absorber.
- 2**: A small bolt or screw.
- 3**: A bracket or plate with two mounting points.
- 4**: A large, L-shaped structural component, likely a control arm or subframe.
- 5**: A small pin or clip.
- 6**: A cylindrical bush or spacer.
- 7**: A small circular bush or washer.
- 8**: A small cylindrical component, possibly a pin or clip.
- 9**: A long, thin rod or pin.
- 10**: A hook or clip.
- 11**: A bracket or plate with two mounting points.
- 12**: A small bolt or screw.
- 13**: A small bolt or screw.
- 14**: A small bolt or screw.
- 15**: A small washer or spacer.
- 16**: A small bolt or screw.

The diagram shows the relative positions of these parts, with dashed lines indicating the assembly sequence and alignment. For example, part 1 is shown with its various components (spring, control arms, shock absorber) and associated fasteners (2, 3, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16) arranged around it. Part 4 is shown with its associated fasteners (5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16) arranged around it. Part 10 is shown with its associated fasteners (11, 12, 13, 14, 15, 16) arranged around it.

BAJAJ
pulsar₂₀₀ OIL/COOLED

BAJAJ
Pulsar *200* OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component. The main parts are labeled as follows:

- 1**: A large, angled metal bracket or housing.
- 2**: A smaller metal bracket or housing.
- 3**: A long, angled metal arm or lever.
- 4**: A long, thin metal rod or shaft.
- 5**: A dashed box indicating a sub-assembly of small components, including a pin, a washer, a nut, and a screw.
- 6**: A small pin or screw.
- 7**: A small pin or screw.
- 8**: A large hexagonal bolt.
- 9**: A long, cylindrical metal rod or shaft.

The diagram shows the following assembly steps:

- Part **8** (large bolt) is shown being inserted into a hole in part **1**.
- Part **2** is shown being attached to part **1** using pins **6** and **7**.
- Part **3** is shown being attached to part **2** using a pin and a washer from the sub-assembly **5**.
- Part **4** (rod) is shown being inserted into a hole in part **2**.
- Part **9** (cylindrical rod) is shown being inserted into a hole in part **4**.

BAJAJ
Pulsar ₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a mechanical device, likely a door latch or handle mechanism, using 12 numbered components. The parts are shown in an exploded view to indicate their relative positions and assembly sequence.

- Component 1:** A rectangular base plate or mounting bracket.
- Component 2:** A long, thin cylindrical pin or screw.
- Component 3:** A small, thin metal plate or washer.
- Component 4:** A coiled spring with hooks at both ends.
- Component 5:** A short, thick cylindrical sleeve or bush.
- Component 6:** A long, angled metal lever or arm with a hook at one end.
- Component 7:** A coiled spring with hooks at both ends.
- Component 8:** A short, thick cylindrical sleeve or bush.
- Component 9:** A small cylindrical pin or bush.
- Component 10:** A hexagonal nut or washer.
- Component 11:** A long, thin metal rod or cable with a hook at one end.
- Component 12:** A small rectangular component, possibly a latch or lock mechanism.

The diagram uses dashed lines to show the alignment and assembly points for components 2, 3, 9, and 10. Component 12 is shown separately at the bottom left.

BAJAJ
pulsar *200* OIL/COOLED

This diagram illustrates the assembly of a motorcycle wheel. It includes the following components:

- 1**: The wheel rim and spokes.
- 2**: The front tire, labeled "GRIP" on the sidewall.
- 3**: The rear wheel rim and spokes.
- 4**: The rear tire, labeled "GRIP" on the sidewall.
- 5**: A small component, likely a nut or washer, used for securing the axle.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a bicycle wheel. The components are numbered as follows:

- 1:** A small screw or pin used to secure the hub.
- 2:** Two different types of bearings or spacers for the axle.
- 3:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 4:** A small circular component, possibly a washer or a small gear.
- 5:** A small circular component, likely a washer or a small gear.
- 6:** A small circular component, likely a washer or a small gear.
- 7:** A circular disc with multiple holes, likely a brake disc or a fender.
- 8:** A small rectangular component, possibly a bracket or a small motor.
- 9:** A small circular component, likely a washer or a small gear.
- 10:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 11:** A large circular component, likely a hub or a large gear.
- 12:** A small cylindrical component, likely a spacer or a part of the hub assembly.
- 13:** A long, thin cylindrical component, likely an axle or a long screw.
- 14:** A small screw or pin used to secure the hub.
- 15:** A small circular component, likely a washer or a small gear.
- 16:** A small rectangular component, possibly a bracket or a small motor.

The diagram shows the wheel assembly in a disassembled state, with dashed lines indicating the relative positions and assembly sequence of the parts. The wheel rim and spokes are shown in the center, with the hub and various components arranged around it.

BAJAJ
Pulsar *200* OIL/COOLED

This exploded view diagram illustrates the assembly of a mechanical component, likely a door latch or actuator. The parts are numbered as follows:

- 1**: The main rectangular housing or base plate.
- 2**: A curved cable or hose assembly.
- 3**: A lever or handle component.
- 4**: Small cylindrical pins or spacers.
- 5**: Small circular washers or spacers.
- 6**: A bracket or mounting plate.
- 7**: Small screws or fasteners.
- 8**: A pin or screw.
- 9**: A small circular component, possibly a bush or washer.
- 10**: Small screws or fasteners.
- 11**: A cylindrical component, possibly a pin or shaft.
- 12**: A small rectangular component, possibly a switch or sensor.
- 13**: A small rectangular component, possibly a switch or sensor.
- 14**: A central rectangular component, possibly a latch or actuator.
- 15**: A spring or coiled wire.

BAJAJ
pulsar₂₀₀ OIL/COOLED

Exploded view diagram of a motorcycle rear brake assembly. The main assembly is shown with callouts 1 through 12. Two sub-assemblies are shown in dashed boxes: the piston assembly (9) and the brake shoe assembly (10).

Callouts:

- 1: Main brake assembly
- 2: Bolt
- 3: Brake shoe
- 4: Bleed screw cap
- 5: Bleed screw cap
- 6: Bolt
- 7: Dust cap
- 8: Dust cap
- 9: Piston assembly
- 10: Brake shoe assembly
- 11: Piston pin
- 12: Piston pin

Sub-assembly 9 (Piston):

- 9: Retenedor
- Sello de Pistón
- 5: Capuchón Tornillo de Sangrado
- 8: Guardapolvo
- 7: Aislante
- Pistón
- 4: Tornillo de Sangrado
- 3: Resorte Pasta Freno

Sub-assembly 10 (Brake Shoe):

- 10: Brake shoe assembly

BAJAJ
pulsar *200* OIL/COOLED

FIGURA N° 35 : RUEDA TRASERA (1/2)

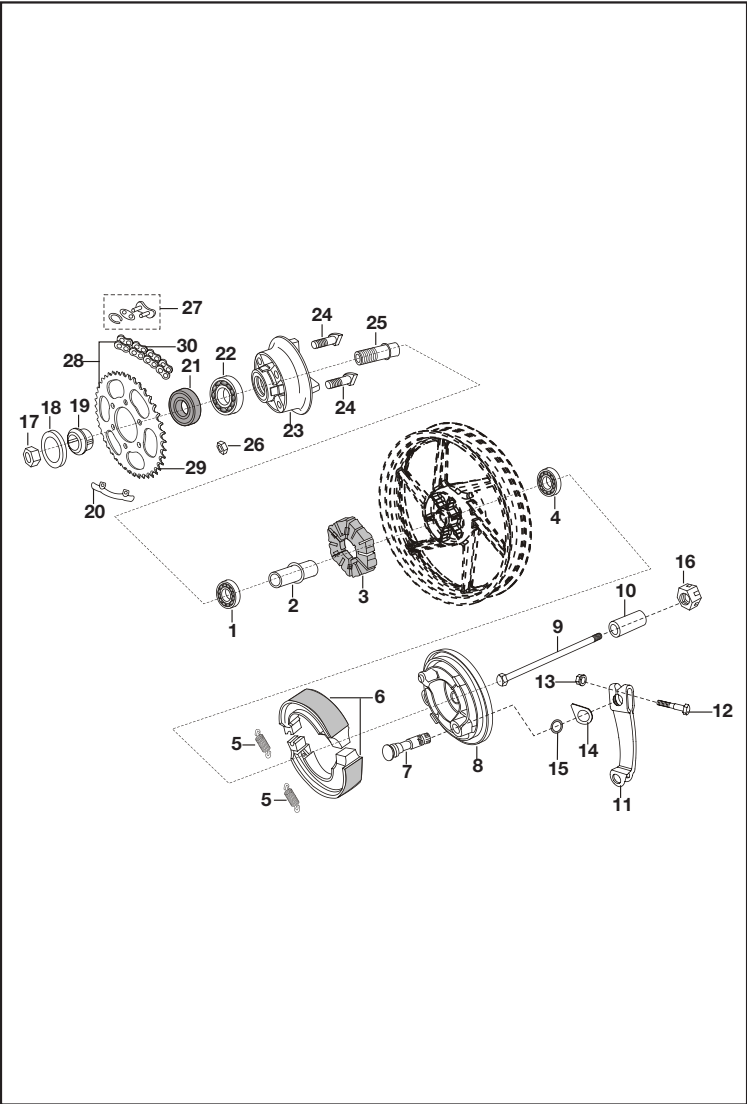


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	39224220	Rodamiento Rueda Trasera	1	
2	DK151022	Buje Rueda Trasera	1	
3	DJ151088	Antivibrante Rueda	1	
4	39224120	Rodamiento Rueda Trasera	1	
5	30151069	Resorte Bandas Freno	2	
6	30151068	Banda de Freno Trasero	1	
7	JC151005	Leva Freno Trasero	1	
8	JC151002	Plato Porta Bandas Tras. (Solo)	1	
9	DK151009	Eje Rueda Trasera	1	
10	JC151011	Buje	1	
11	JC151007	Leva Freno Trasero	1	
12	39244704	Tornillo Leva Freno	1	
13	39079815	Tuerca de 6mm.	1	
14	JC151006	Indicador Desgaste Bandas	1	
15	30151038	Anillo Retenedor	1	
16	DH171019	Tuerca Pasador Brazo Oscilante	1	
17	39199715	Tuerca Porta Sproket	2	
18	39122411	Arandela Porta Sproket	2	
19	DK151014	Buje Porta Sproket	1	
20	DS151074	Arandela Tornillo Sproket	3	
21	DK151012	Retén Porta Sproket	1	
22	DK151013	Rodamiento Porta Sproket	1	
23	DK151005	Porta Sproket	1	
24	DS151073	Tornillos Sproket	6	
25	DK151015	Buje	1	

This exploded view diagram illustrates the assembly of a bicycle wheel. The components are numbered as follows:

- 1**: Small circular hub component.
- 2**: Small cylindrical hub component.
- 3**: Hub body with a central axle hole.
- 4**: Small circular hub component.
- 5**: Two small pins or washers used for the brake arm.
- 6**: Brake arm assembly.
- 7**: Small cylindrical hub component.
- 8**: Wheel rim with spokes.
- 9**: Long axle pin.
- 10**: Axle pin sleeve.
- 11**: Brake lever arm.
- 12**: Small pin or screw for the brake lever.
- 13**: Small pin or screw for the axle.
- 14**: Small pin or screw for the brake lever.
- 15**: Small pin or screw for the brake lever.
- 16**: Small circular hub component.
- 17**: Small circular hub component.
- 18**: Small circular hub component.
- 19**: Small circular hub component.
- 20**: Small circular hub component.
- 21**: Small circular hub component.
- 22**: Small circular hub component.
- 23**: Small circular hub component.
- 24**: Small circular hub component.
- 25**: Small circular hub component.
- 26**: Small circular hub component.
- 27**: Small circular hub component.
- 28**: Small circular hub component.
- 29**: Large gear or sprocket.
- 30**: Small circular hub component.

BAJAJ
pulsar₂₀₀ OIL/COOLED

This diagram illustrates the assembly of a rear suspension component, likely a rear axle or shock absorber. The parts are numbered as follows:

- 1**: A bracket or mounting plate.
- 2**: A coiled spring.
- 3**: A long, thin rod or shaft.
- 4**: A long, thin rod or shaft, similar to part 3 but with a different end configuration.
- 5**: A long, thin rod or shaft, similar to part 3 but with a different end configuration.
- 6**: A small cylindrical component.
- 7**: A small cylindrical component.
- 8**: A small cylindrical component.
- 9**: A small cylindrical component.
- 10**: A small cylindrical component.
- 11**: A small cylindrical component.
- 12**: A small cylindrical component.
- 13**: A small cylindrical component.
- 14**: A small cylindrical component.

The diagram shows the relative positions and assembly sequence of these components. Dashed lines indicate the alignment and fit of the parts. A line connects part 4 to a dashed box containing parts 12, 11, 10, and 9, suggesting they are sub-components or assembly steps related to part 4.

BAJAJ
Pulsar *200* OIL/COOLED

FIGURA N° 37: MANUBRIO

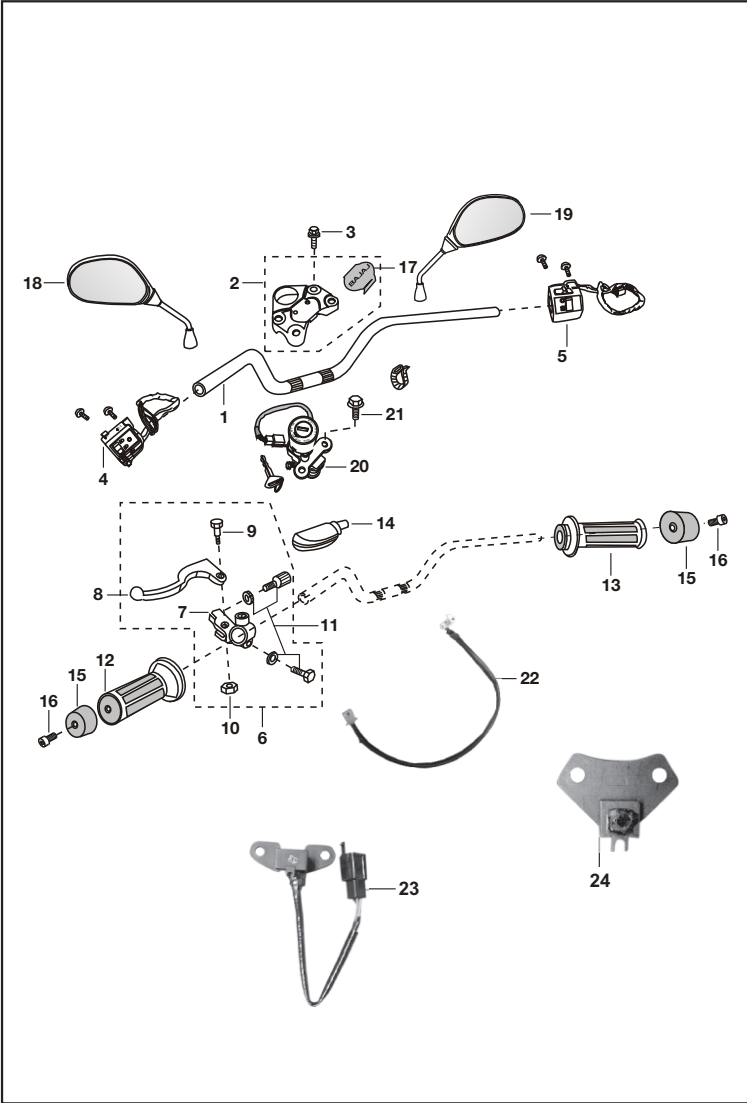


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC181005	Manubrio	1	
2	DH181053	Abrazadera Manubrio	1	
3	39171404	Tornillo	4	
4	DH201048	Comando Luces Izquierdo	1	
5	DH201049	Comando Luces Derecho	1	
6	DJ191053	Soporte Leva Clutch	1	
7	DJ191054	Soporte Izquierdo	1	
8	DJ191055	Leva Clutch	1	
9	DD191085	Tornillo Leva Clutch	1	
10	39118415	Tuerca Comando Izquierdo	1	
11	36DK0019	Juego Tornillos Leva Freno	1	Ref. Pag. No.53
12	DH191007	Manillar Izquierdo	1	
13	DH191014	Carretel Acelerador	1	
	DH191017	Tubo Interno Manillar Acelerador	1	
	DH191008	Caucho Manillar Acelerador (Solo)	1	
14	DH191019	Guardapolvo	1	
15	DJ181011	Bujes Manubrio	2	
16	DH181040	Tornillo	2	Alt. 39 2427 04
17	DJ181039	Emblema Manubrio	1	
18	DJ221003	Espejo Retrovisor Izquierdo	1	
19	DJ221004	Espejo Retrovisor Derecho	1	
20	DS181022	Switch Encendido	1	
21	39194304	Tornillos	2	
22	DJ201035	Swiche Clutch	1	
23	DJ201180	Sensor De Direccionales	1	
24	DJ201181	Imán Autocancelación Direccionales	1	

FIGURA N° 38: SUSPENSIÓN DELANTERA (1/2)

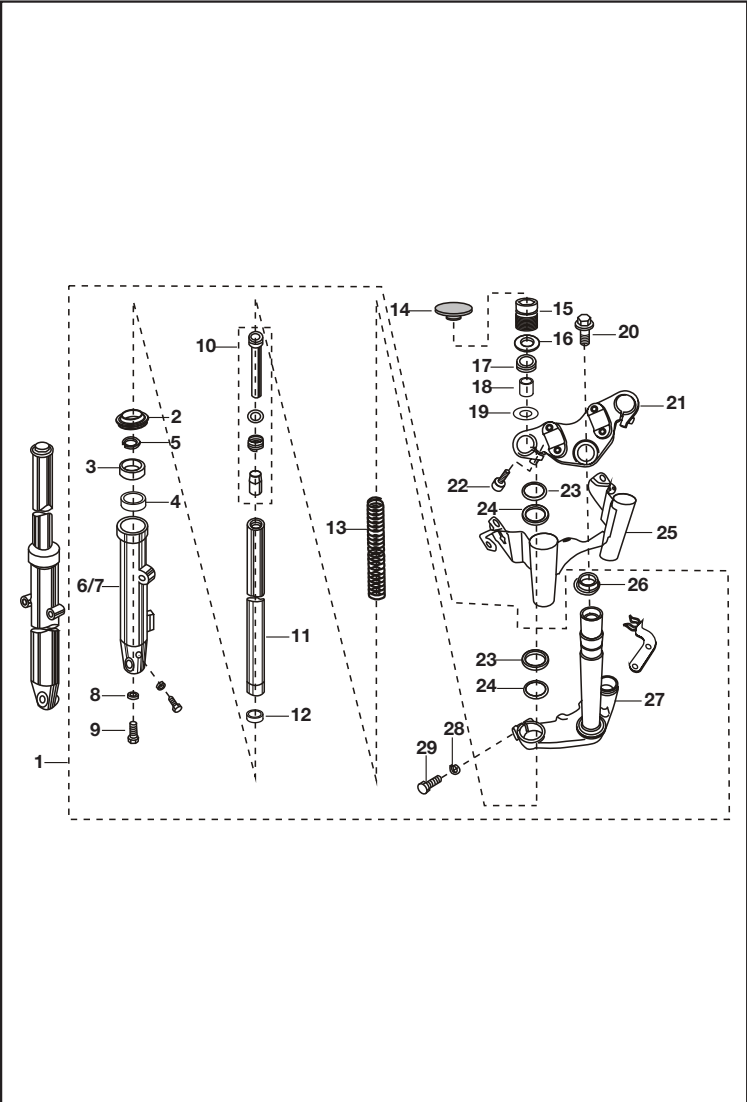


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JC181001	Suspensión Delantera Completa	1	
2	DG181021	Guardapolvo Telescópico	2	
3	DG181023	Retén Tubo Telescópico	2	
4	DG181013	Buje Guía Tubo Telescópico	2	
5	DG181022	Pin de Seguridad	2	
6	JC181011	Camisa Tubo Telescópico Izquierda	1	
7	JC181012	Camisa Tubo Telescópico Derecha	1	
8	30181026	Junta Tornillo	2	
9	30181025	Tornillo Camisa Telescópico	2	
10	DS181077	Cilindro Interno Tubo Telescópico	2	
11	JC181021	Tubo Telescópico	2	
12	DG181011	Buje Guía Tubo Telescópico	2	
13	JC181017	Resorte Tubo Telescópico	2	
14	DH181009	Caucho Tapón Suspensión	2	
15	DH181015	Tornillo Telescópico	2	
16	30181029	Anillo Retén	2	
17	30181028	Arandela Resorte Suspensión	2	
18	DS181085	Buje Separador Cabeza Espiga	2	
19	DG181003	Arandela	2	
20	59040005	Tornillo Espiga	1	Alt. DG181025
21	JC181002	Cabeza Espiga	1	
22	DG181008	Tornillo Soporte Guardafango Del.	2	
23	JC181007	Caucho Espiga	2	
24	JC181006	Cubierta Caucho Espiga	4	
25	52JC0019	Soporte Farola	1	

This exploded view diagram illustrates the assembly of a mechanical device, likely a pump or actuator. The components are numbered 1 through 29. The assembly is organized into several sub-assemblies indicated by dashed lines:

- Left Sub-assembly (Parts 1-9):** Includes a main shaft (1), a series of seals and washers (2, 3, 4, 5), and a lower housing component (6/7) with a pin (8) and a screw (9).
- Central Sub-assembly (Parts 10-12):** Features a long shaft (10) with a seal (11) and a nut (12).
- Coil Spring (Part 13):** A large helical spring positioned between the central and right sub-assemblies.
- Right Sub-assembly (Parts 14-29):** A complex assembly including a cap (14), a series of seals and washers (15, 16, 17, 18, 19), a main body (20, 21), a lever arm (22), a pin (23), a washer (24), a housing (25), a nut (26), a pin (27), a lever (28), and a screw (29).

BAJAJ
Pulsar 200 OIL/COOLED

Exploded view diagram of a Pulsar 200 outboard motor. The diagram shows the following components:

- 1: Main motor housing with "Pulsar" logo
- 2: Lower cowl with "Pulsar" logo
- 3: Upper cowl with "Pulsar" logo
- 4: Lower trim tab
- 5: Upper trim tab
- 6: Small trim tab
- 7: Trim tab bracket
- 8: Upper cowl with "Pulsar" logo
- 9: Trim tab bracket
- 10/11: Propeller and shaft assembly
- 12: Pin
- 13: Clip
- 14: Nut
- 15: "Pulsar" logo (part of 16)
- 16: "Pulsar" logo (part of 15)
- 17: "200" logo (part of 18)
- 18: "OIL COOLED" logo (part of 15)

BAJAJ
Pulsar₂₀₀ OIL/COOLED

Exploded view diagram of a car stereo unit. The main unit is labeled 1. Components shown include:

- 3: Faceplate
- 5: Mounting bracket
- 2: Screw
- 4: Antenna
- 6: Antenna mast
- 8: Nut
- 7: Washer
- 13: Spacer
- 12: Antenna cable
- 15: Antenna cable
- 14: Antenna cable
- 9: Wiring harness
- 10: Mounting plate
- 11: Screw

BAJAJ
pulsar *200* OIL/COOLED

BAJAJ
pulsar *200* OIL/COOLED

This diagram illustrates the components of a rear wiper assembly. The main assembly is shown at the bottom, consisting of a wiper blade (3) mounted on a wiper arm. Two screws (4) are shown being inserted into the wiper arm to secure the blade. Above the main assembly, two wiper blades (1 and 2) are shown separately. To the right, a coiled cable (5) with a connector is shown, along with a small circular component (6).

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the components of a car headlight assembly. The parts are numbered as follows:

- 1:** Main headlight housing.
- 2:** Lens or reflector component.
- 3:** Upper trim or bezel.
- 4:** Small screw or pin.
- 5:** Small screw or pin.
- 6:** Small screw or pin.
- 7:** Small component, possibly a washer or spacer.
- 8:** Large screw or bolt.
- 9:** Curved trim or mounting bracket.
- 10:** Mounting bracket or arm.
- 11:** Mounting plate or bracket with multiple holes.
- 12:** Small rectangular component, possibly a gasket or spacer.
- 13:** Small screw or pin.
- 14:** Small screw or pin.
- 15:** Bulb or socket assembly.
- 16:** Electrical wiring harness with connectors.

Dashed lines indicate the assembly sequence and the relative positions of the components.

BAJAJ
Pulsar *200* OIL/COOLED

Diagram illustrating the assembly of a car headlight. The diagram shows the headlight housing (1/2) and the mounting bracket (3/4). The mounting bracket (3/4) is shown with a mounting nut (6) and a mounting bolt (5). The headlight housing (1/2) is shown with a mounting bracket (3/4) and a mounting nut (6). The mounting bracket (3/4) is shown with a mounting nut (6) and a mounting bolt (5). The headlight housing (1/2) is shown with a mounting bracket (3/4) and a mounting nut (6).

BAJAJ
pulsar₂₀₀ OIL/COOLED

This exploded view diagram illustrates the assembly of a car stereo unit. The components are numbered as follows:

- 1**: The main car stereo unit, shown in a dashed box at the top right.
- 2**: A small screw used to secure the unit to the dashboard.
- 3**: A small plastic spacer or bush.
- 4**: A small screw used for mounting.
- 5**: A screw used to attach the antenna wire to the unit.
- 6**: A screw used to secure the faceplate.
- 7**: A rectangular speaker or tweeter component with a cable.
- 8**: A metal mounting bracket or plate.
- 9**: A rectangular faceplate or cover.
- 10**: A screw used to secure the faceplate.
- 11**: A control panel or faceplate with various buttons and a display.
- 12**: A series of small components, including a screw, a spacer, and a bush, used for mounting the control panel.

Dashed lines indicate the assembly path and alignment for each component.

BAJAJ
pulsar *200* OIL/COOLED

This diagram illustrates the components of a vehicle's electrical system, numbered 1 through 19. The components are as follows:

- 1/2**: A circular component, likely a voltage regulator or alternator housing, with a mounting bracket.
- 3**: A small circular component, possibly a terminal or connector.
- 4**: A bolt or screw used for mounting.
- 5**: A rectangular battery unit.
- 6**: A fuse block or fuse holder.
- 7**: A complex wiring harness with multiple branches and connectors.
- 8**: A component, possibly a relay or solenoid, with a mounting bracket.
- 9**: A coiled spring or wire.
- 10**: A small rectangular component, possibly a fuse or terminal.
- 11**: A small cylindrical component, possibly a fuse or terminal.
- 12**: A rectangular component, possibly a fuse block or fuse holder.
- 13**: A component, possibly a fuse block or fuse holder.
- 14**: A small cylindrical component, possibly a fuse or terminal.
- 15**: A wire with a terminal.
- 16**: A wire with a terminal.
- 17**: A complex wiring harness with multiple branches and connectors.
- 18**: A bolt or screw used for mounting.
- 19**: A bolt or screw used for mounting.

BAJAJ
Pulsar 200 OIL/COOLED

Figure 1 illustrates the tools and components required for the front suspension assembly. The top section shows a collection of tools (8) and a component (9) inside a dashed box. The bottom section shows exploded views of the front suspension components, including the upper control arm (1), lower control arm (2), and steering knuckle (3, 4).

BAJAJ
pulsar₂₀₀ OIL/COOLED

LISTA DE KITS

Item	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
1	36DH1006	Kit Antivibrantes Tapa Volante	DH101282	Antivibrante Tapa Volante	1
			DH101292	Antivibrante "A" Izquierdo	1
			DH101294	Antivibrante "B" Izquierdo	1
2	36DH1007	Kit Arandelas Tapa Volante	DH101283	Antivibrante Platina Plato Bobinas	1
			DH101293	Antivibrante Platina Tapa Volante	1
3	36DK0007	Kit Filtro Centrifugo	39220011	Arandela	1
			DH101234	Junta Filtro Centrifugo	1
			39226701	Tornillo Estrella	1
			DH101066	Conducto Aceite	1
			DH101067	Resorte Conducto Aceite	1
			39219908	Pin	1
4	36DK0011	Kit Tornillos Soportes de Motor	39231204	Tornillo	4
			39197015	Tuerca	8
			39241304	Tornillo	1
			DH161245	Tuerca	3
5	36DK0012	Kit Bujes Amortiguador	39071411	Arandela	8
			39071215	Tuerca	2
			39073712	Wasa	2
6	36DK0013	Kit Pines Reposapié Pasajero	DJ161186	Platina	2
			DH161061	Pin	2
			30141031	Anillo Retenedor	2
			39104011	Arandela	2
			39078408	Pin	2
7	36DK0017	Kit Varilla Freno	30191038	Pin	1
			39021911	Arandela 6 mm	1
			39080808	Pin	1
			30191035	Resorte Varilla Freno	1
			15191026	Pin Pasador Varilla Freno	1
			30191036	Tuerca	1

LISTA DE KITS

Item	Referencia	Descripción	Contenido del Kit		
			Referencia	Descripción	Cant.
8	36DK0019	Kit Soporte Leva Clutch	30191024	Tornillo Ajuste	1
			30191017	Tuerca	1
			39021911	Arandela	1
			39072504	Tornillo	1
9	36DK0021	Kit Bujes Soporte Carenaje	DJ181029	Buje Carenaje	1
			DJ181064	Antivibrante	1
			39021111	Arandela	1
			39155304	Tornillo	1
10	36DS1001	Kit Anillos Reten Culata	39239121	Anillo Retenedor	2
			39128321	Anillo Retenedor	2
11	36DV0003	Kit Cunas de Dirección	DG181045	Cuna Chasis	1
			DG181046	Cuna Dirección	1
			DG181047	Cuna Superior	1
12	36JC0001	Kit Calcomanías	JC141018	"Calcomanía" Oil Cooler Izquierda	1
			JC141019	"Calcomanía" Oil Cooler Derecha	1
			JC161019	Calcomanía Cubierta Sillín Izquierda	1
			JC161020	Calcomanía Cubierta Sillín Derecha	1
			DJ141044	Calcomanía Tanque Izquierda	1
			DJ141045	Calcomanía Tanque Derecha	1
13	36JC0002	Kit Sprocket y Cadena	DV101048	Piñón Salida 14 Dientes	1
			JC151044	Sprocket 38 Dientes	1
			DK151010	Cadena 520x104L	1
14	DK101326	Kit Resortes Válvula	DK101247	Arandela Resorte Válvula	2
			DK101108	Resorte Interno Válvula	2
			DK101110	Resorte Externo Válvula	2
			DK101246	Arandela Resorte Válvula	2
15	DK101327	Kit Válvulas	DK101052	Válvula de Admisión	1
			DK101011	Válvula de Escape	1
16	DK161185	Kit Antivibrantes Tapas Laterales	DH161158	Antivibrante Tapa Lateral Delantero	2
			DH161133	Antivibrante Tapa Lateral Trasero	2
17	JC101038	Kit Guías Cadenilla	DH101017	Guía Cadenilla	1
			DK101059	Guía Cadenilla	1

NOTAS IMPORTANTES

Pag. N°.	Item N°.	Referencia Anterior	Descripción	Cant.	Observaciones	Fecha
8	14	DK101106	Piñón de 4a.	1	El Piñón nuevo (DK101718) es intercambiable siempre y cuando se cambie también el piñón de primera (DK101717)	01-Ene-12
				1		
8	17	DK101118	Piñón de 1a.	1	El Piñón nuevo (DK101717) es intercambiable siempre y cuando se cambie también el piñón de cuarta (DK101718)	01-Ene-12
				1		
8	18	DK101633	Piñón de 5a.	1	El Piñón nuevo (DK101720) es intercambiable siempre y cuando se cambie también el piñón de segunda (DK101719)	01-Ene-12
				1		
8	20	DH101333	Piñón de 2a.	1	El Piñón nuevo (DK101719) es intercambiable siempre y cuando se cambie también el piñón de quinta (DK101720)	01-Ene-12
				1		

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
020251/00	13	31
15191026	7	52
30101014	11	12
30101061	21	8
30101236	24	13
30101236	6	26
30141031	6	52
30141032	11	43
30141039	6	43
30151038	15	36
30151068	6	36
30151069	5	36
30151095	7	38
30161157	2	31
30181025	9	40
30181026	8	40
30181028	17	40
30181029	16	40
30191017	8	53
30191024	8	53
30191035	7	52
30191036	7	52
30191038	7	52
30201085	14	50
30201104	13	50
31101106	11	1
31101106	15	12
31101173	4	6
31201081	16	12
35171033	14	27
36DH1006	6	14
36DH1006	1	52
36DH1007	8	14
36DH1007	2	52

PARTE No.	FIG. No.	PAG. No.
36DH1902	15	34
36DH4007	19	24
36DK0007	13	6
36DK0007	3	52
36DK0011	21	25
36DK0011	4	52
36DK0012	3	27
36DK0012	5	52
36DK0013	5	29
36DK0013	6	52
36DK0015	9	19
36DK0017	4	38
36DK0017	7	52
36DK0018	12	38
36DK0019	11	39
36DK0019	8	53
36DK0021	11	47
36DK0021	9	53
36DK0026	16	42
36DK0029	9	6
36DK0029	20	15
36DK0033	1	51
36DK0038	2	16
36DS1001	3	1
36DS1001	11	2
36DS1001	10	53
36DV0003	5	26
36DV0003	11	53
36JC0001	15	42
36JC0001	12	53
36JC0002	28	37
36JC0002	13	53
36JC0013	15	2
39000701	5	19

PARTE No.	FIG. No.	PAG. No.
39021111	9	53
39021911	7	52
39021911	8	53
39029215	7	29
39042215	10	31
39069415	9	38
39070501	5	49
39071111	4	30
39071215	5	52
39071411	5	52
39071601	13	47
39072504	8	53
39073712	5	52
39074011	15	27
39074011	8	43
39074601	7	23
39075201	7	12
39076101	5	23
39078408	6	52
39078708	3	31
39078708	1	33
39078912	8	38
39078912	28	41
39079415	26	37
39079815	13	36
39080708	10	38
39080808	7	52
39084001	2	43
39089704	5	28
39099906	10	13
39099906	4	14
39104011	6	52
39104119	3	13
39106204	24	8

PARTE No.	FIG. No.	PAG. No.
39106204	18	50
39106901	6	29
39107504	9	1
39118415	10	39
39122411	16	27
39122411	18	36
39128215	4	28
39128321	5	2
39128321	10	53
39150711	3	50
39152401	14	47
39154011	11	38
39155304	9	53
39155604	7	44
39162011	9	7
39166005	2	2
39166121	3	17
39167204	3	7
39167204	5	17
39167304	13	4
39167404	8	2
39167404	14	2
39167404	11	7
39167404	19	15
39167404	2	22
39167404	4	23
39167704	25	12
39168004	7	26
39168004	5	30
39168004	10	49
39168004	11	50
39168606	8	7
39168606	4	22
39171404	3	39

PARTE No.	FIG. No.	PAG. No.
39174104	8	29
39176511	4	19
39176904	2	35
39177304	12	49
39177802	2	45
39178001	12	18
39181304	29	41
39184504	18	12
39188020	4	4
39188020	15	15
39188020	16	16
39190204	6	21
39190204	15	23
39190701	8	47
39193120	6	6
39194304	21	39
39194404	17	23
39195604	4	50
39196704	12	25
39197015	5	25
39197015	6	48
39197015	4	52
39197215	6	49
39199020	21	13
39199715	17	36
39199819	11	10
39201719	5	3
39213217	5	5
39214124	5	47
39215220	5	7
39215320	20	6
39215704	8	25
39215811	2	8
39216011	9	8

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
39216511	3	6
39218006	8	11
39218006	22	12
39218106	2	5
39218106	23	12
39218304	2	6
39218304	3	14
39218520	10	12
39218819	4	12
39219019	12	12
39219421	6	22
39219908	15	6
39219908	3	52
39220011	14	6
39220011	13	15
39220011	14	16
39220011	3	52
39220307	8	6
39224120	4	36
39224220	1	36
39226701	18	6
39226701	3	52
39230504	19	12
39231004	16	25
39231004	2	51
39231004	5	51
39231104	17	25
39231204	4	25
39231204	4	52
39236220	2	33
39238104	3	43
39239121	10	53
39241204	9	25
39241304	10	25

PARTE No.	FIG. No.	PAG. No.
39241304	4	52
39241404	13	25
39242411	8	44
39243704	6	9
39244311	17	13
39244704	12	36
39244811	21	12
39245221	12	14
39245304	6	10
39245711	18	25
39253204	8	1
39254220	3	4
39254717	26	13
39255717	7	7
39258320	6	11
39260120	7	11
39260320	8	12
39260607	7	9
39260801	10	2
39263704	8	17
39264715	6	1
39266921	1	4
39275821	10	43
41070-1217-NR57TL/18	4	32
41070-9017-NF45/18	2	32
52DH0177	10	7
52DK0013	5	42
52DK0027	4	42
52DK5506	2	42
52DK5507	3	42
52JC0001	8	42
52JC0002	9	42
52JC0019	25	40
59010013	4	49

PARTE No.	FIG. No.	PAG. No.
59020001	12	42
59040005	20	40
59040031	9	4
59040040	2	30
59050008	3	11
59050008	2	12
59100002	1	23
59110002	9	3
59200006	9	12
59200007	9	24
59200027	9	11
59210006	5	12
59210008	13	2
59210029	6	46
AP101043	10	14
BA122003	13	43
BASE-AGUJA-PULSAR/00	19	18
CB121014	7	19
CS101128	14	4
DD101062	15	4
DD111012	14	23
DD141022	7	43
DD191085	9	39
DE151008	6	33
DE151012	5	33
DE191010	5	34
DE191011	4	34
DE191043	1	34
DF161102	9	31
DF181098	4	47
DG101029	4	3
DG101339	14	38
DG101418	7	13
DG111008	8	23

PARTE No.	FIG. No.	PAG. No.
DG141028	15	43
DG151005	4	33
DG151007	12	33
DG151008	9	33
DG151049	10	33
DG151089	1	35
DG161121	3	44
DG171018	5	27
DG171019	7	27
DG171020	12	27
DG171021	11	27
DG171022	13	27
DG171034	10	27
DG171038	2	27
DG181003	19	40
DG181005	26	41
DG181008	22	40
DG181011	12	40
DG181013	4	40
DG181021	2	40
DG181022	5	40
DG181023	3	40
DG181042	4	26
DG181045	11	53
DG181046	11	53
DG181047	11	53
DG181048	3	26
DH101006	5	11
DH101017	17	53
DH101048	8	4
DH101064	10	6
DH101065	12	6
DH101066	19	6
DH101066	3	52

PARTE No.	FIG. No.	PAG. No.
DH101067	17	6
DH101067	3	52
DH101072	2	7
DH101079	4	8
DH101079	13	8
DH101084	8	8
DH101111	15	8
DH101141	4	13
DH101142	5	13
DH101144	3	10
DH101146	3	9
DH101154	12	13
DH101157	11	14
DH101163	17	24
DH101164	15	24
DH101172	7	24
DH101180	18	15
DH101180	19	16
DH101188	8	24
DH101195	11	6
DH101197	2	13
DH101199	6	23
DH101203	13	12
DH101234	16	6
DH101234	3	52
DH101235	5	8
DH101272	10	1
DH101275	17	15
DH101275	18	16
DH101282	1	52
DH101283	2	52
DH101292	1	52
DH101293	2	52
DH101294	1	52

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DH101319	18	8
DH101323	13	14
DH101333	19	8
DH101336	11	8
DH101382	10	24
DH101383	4	11
DH101385	5	24
DH101388	19	13
DH101388	7	14
DH101389	14	24
DH101392	11	4
DH101393	7	10
DH101394	10	10
DH101412	7	4
DH101414	10	5
DH101482	22	13
DH101487	10	11
DH101493	4	9
DH101496	9	9
DH101503	8	10
DH101508	4	2
DH101509	5	10
DH101510	18	13
DH101520	15	16
DH101525	7	20
DH101533	18	24
DH101544	16	13
DH101581	4	24
DH101607	3	20
DH101628	1	16
DH101648	14	15
DH101658	3	24
DH101661	14	12
DH101705	1	10

PARTE No.	FIG. No.	PAG. No.
DH101714	2	10
DH101781	2	24
DH101782	1	24
DH101784	17	12
DH101805	6	20
DH101861	9	16
DH111012	9	2
DH111013	9	23
DH111015	13	23
DH111016	18	23
DH121001	1	22
DH121010	3	22
DH121011	14	13
DH121012	15	13
DH121015	13	13
DH121020	3	19
DH121035	5	22
DH121038	7	2
DH121101	10	18
DH121102	11	18
DH141020	6	42
DH141023	5	44
DH141024	14	43
DH141031	2	44
DH141048	5	43
DH141050	1	43
DH151029	6	38
DH161046	3	21
DH161053	3	28
DH161056	7	28
DH161061	6	52
DH161066	7	31
DH161100	6	28
DH161112	2	26

PARTE No.	FIG. No.	PAG. No.
DH161121	4	31
DH161133	16	53
DH161145	5	31
DH161146	8	31
DH161158	16	53
DH161189	2	25
DH161190	3	25
DH161245	15	25
DH161245	4	52
DH161273	11	25
DH161283	4	46
DH161292	11	49
DH161293	2	49
DH161293	13	49
DH171019	8	27
DH171019	8	33
DH171019	16	36
DH181009	14	40
DH181015	15	40
DH181040	16	39
DH181052	10	47
DH181053	2	39
DH191007	12	39
DH191008	13	39
DH191012	9	50
DH191014	13	39
DH191017	13	39
DH191019	14	39
DH201019	10	50
DH201048	4	39
DH201049	5	39
DH201064	11	31
DH201065	12	31
DH211005	9	51

PARTE No.	FIG. No.	PAG. No.
DH221004	8	51
DJ101022	1	7
DJ101063	23	8
DJ101064	4	20
DJ101109	16	24
DJ101133	6	7
DJ101134	4	7
DJ101209	1	14
DJ101217	2	1
DJ101278	13	24
DJ101350	3	15
DJ101350	4	16
DJ101369	7	16
DJ111023	19	23
DJ111059	2	23
DJ111061	3	23
DJ111062	20	23
DJ121051	2	18
DJ121052	3	18
DJ121053	5	18
DJ121054	6	18
DJ121055	7	18
DJ121057	18	18
DJ121058	14	18
DJ121059	15	18
DJ141006	12	43
DJ141007	4	43
DJ141008	6	44
DJ141044	12	53
DJ141045	12	53
DJ151068	3	35
DJ151069	4	35
DJ151070	5	35
DJ151071	6	35

PARTE No.	FIG. No.	PAG. No.
DJ151072	7	35
DJ151073	8	35
DJ151074	9	35
DJ151075	10	35
DJ151076	2	34
DJ151088	3	36
DJ151105	11	35
DJ151106	12	35
DJ161012	9	14
DJ161067	16	23
DJ161069	9	30
DJ161072	8	49
DJ161079	6	51
DJ161080	7	51
DJ161090	8	28
DJ161126	1	28
DJ161127	2	28
DJ161128	3	29
DJ161129	4	29
DJ161132	8	26
DJ161133	9	26
DJ161186	6	52
DJ161188	17	18
DJ161247	6	50
DJ181011	15	39
DJ181029	9	53
DJ181033	3	47
DJ181037	7	47
DJ181039	17	39
DJ181064	9	53
DJ181065	12	47
DJ181069	9	47
DJ181090	7	42
DJ181119	3	45

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DJ181120	2	47
DJ191027	6	34
DJ191028	7	34
DJ191029	8	34
DJ191030	9	34
DJ191031	10	34
DJ191034	13	34
DJ191035	14	34
DJ191053	6	39
DJ191054	7	39
DJ191055	8	39
DJ191056	11	34
DJ191057	3	34
DJ191061	1	46
DJ201020	16	50
DJ201021	20	12
DJ201035	22	39
DJ201100	12	34
DJ201126	5	50
DJ201140	15	50
DJ201146	3	48
DJ201147	4	48
DJ201148	1	48
DJ201149	2	48
DJ201159	4	45
DJ201163	5	45
DJ201164	10	23
DJ201165	17	50
DJ201180	23	39
DJ201181	24	39
DJ221003	18	39
DJ221004	19	39
DK101001	5	15
DK101003	3	2

PARTE No.	FIG. No.	PAG. No.
DK101011	15	53
DK101052	15	53
DK101059	17	53
DK101063	1	5
DK101072	16	15
DK101072	17	16
DK101073	1	15
DK101075	3	15
DK101078	9	15
DK101094	3	12
DK101097	6	12
DK101102	6	8
DK101103	3	8
DK101104	7	8
DK101105	12	8
DK101106	14	8
DK101107	17	8
DK101108	14	53
DK101110	14	53
DK101112	1	17
DK101118	16	8
DK101122	23	13
DK101123	25	13
DK101124	24	12
DK101125	1	8
DK101126	2	15
DK101126	3	16
DK101135	10	9
DK101144	10	8
DK101149	6A	15
DK101150	6B	15
DK101151	7	15
DK101152	8	15
DK101153	10	15

PARTE No.	FIG. No.	PAG. No.
DK101154	12	15
DK101155	11	15
DK101157	5	9
DK101159	1	9
DK101160	2	9
DK101163	4	15
DK101176	6	24
DK101177	16	10
DK101180	13	10
DK101182	4	10
DK101185	14	10
DK101186	15	10
DK101187	12	10
DK101225	2	17
DK101236	8	5
DK101236	9	17
DK101237	9	5
DK101237	10	17
DK101238	7	5
DK101238	4	17
DK101244	5	20
DK101245	20	8
DK101246	14	53
DK101247	14	53
DK101248	7	6
DK101251	6	13
DK101252	11	13
DK101253	9	10
DK101255	6C	15
DK101275	7	17
DK101276	6	17
DK101279	13	17
DK101289	11	17
DK101326	6	3

PARTE No.	FIG. No.	PAG. No.
DK101326	14	53
DK101327	7	3
DK101327	15	53
DK101328	4	5
DK101340	12	17
DK101356	6	15
DK101361	8	9
DK101380	16	12
DK101382	5	9
DK101475	8	20
DK101561	21	16
DK101564	6	16
DK101565	8	16
DK101566	7A	16
DK101567	7C	16
DK101568	7B	16
DK101569	5	16
DK101570	11	16
DK101571	12	16
DK101573	10	16
DK101574	13	16
DK101574	20	16
DK101595	1	24
DK101596	15	24
DK101605	2	24
DK101636	18	15
DK111010	8	19
DK121009	2	19
DK141015	9	44
DK151005	23	36
DK151006	2	32
DK151007	4	32
DK151008	13	33
DK151009	9	36

PARTE No.	FIG. No.	PAG. No.
DK151010	30	37
DK151010	13	53
DK151012	21	36
DK151013	22	36
DK151014	19	36
DK151015	25	36
DK151022	2	36
DK151026	5	32
DK151027	7	33
DK151028	3	33
DK151036	27	37
DK161085	6	30
DK161086	3	30
DK161096	1	25
DK161098	1	30
DK161122	1	31
DK161123	10	42
DK161124	11	42
DK161127	19	25
DK161128	20	25
DK161137	1	29
DK161147	3	51
DK161148	4	51
DK161153	3	49
DK161159	6	25
DK161160	7	25
DK161161	14	25
DK161164	14	49
DK161185	1	44
DK161185	16	53
DK161187	15	17
DK161189	14	17
DK161198	7	30
DK161199	3	46

ÍNDICE DE REFERENCIAS

PARTE No.	FIG. No.	PAG. No.
DK171003	9	27
DK171006	6	27
DK181034	4	44
DK181050	6	26
DK181051	10	26
DK191011	2	46
DK191013	2	38
DK201003	1	49
DK201024	7	49
DK201037	1	50
DK201038	2	50
DK201044	16	47
DK201052	6	45
DK201065	9	43
DK201077	14	33
DK201078	12	50
DK211001	1	21
DK211004	4	21
DK211008	5	21
DK221005/00	1A	51
DK221006/00	AB	51
DL181010	6	47
DP161145	9	49
DS101084	7	1
DS101096	5	1
DS101154	5	6
DS101166	4	1
DS101215	8	13
DS101263	27	13
DS101276	6	4
DS101333	3	3
DS101335	1	3
DS101336	2	3
DS101353	9	13

PARTE No.	FIG. No.	PAG. No.
DS101353	12	24
DS101366	8	3
DS151073	24	36
DS151074	20	36
DS161125	8	30
DS181022	20	39
DS181077	10	40
DS181085	18	40
DS211005	2	21
DV101042	2	14
DV101048	22	8
DV101048	13	53
F-SILLIN-PUL-200-DEL	7	21
F-SILLIN-PUL-200-TRA	8	21
GH201012	5	48
JC101001	1	6
JC101012	3	5
JC101014	1	20
JC101016	1	12
JC101018	1	11
JC101022	2	4
JC101029	2	11
JC101030	1	13
JC101033	5	14
JC101034	12	4
JC101035	10	4
JC101036	1	1
JC101036	1	2
JC101037	6	5
JC101038	5	4
JC101038	17	53
JC101040	20	13
JC101045	1	12
JC101046	1	20

PARTE No.	FIG. No.	PAG. No.
JC101085	4	4
JC101086	3	4
JC111003	11	23
JC111004	12	23
JC111007	11	24
JC120001	12	2
JC120002	6	19
JC120003	6	2
JC120004	1	19
JC120005	1	18
JC120006	9	18
JC120007	16	18
JC120009	4	18
JC120010	13	18
JC120011	8	18
JC141015	13	42
JC141017	14	42
JC141018	18	42
JC141018	12	53
JC141019	12	53
JC151002	8	36
JC151005	7	36
JC151006	14	36
JC151007	11	36
JC151008	5	38
JC151010	3	32
JC151011	10	36
JC151013	1	32
JC151014	29	37
JC151014	13	53
JC151019	11	33
JC161002	2	29
JC161017	6	31
JC161019	17	42

[illegible][illegible]

BAJAJ *pulsar* 200 OIL/COOLED

FICHA TÉCNICA PULSAR 200

Motor :	4T, monocilíndrico, con radiador de aceite.
Diámetro x Carrera :	67.00mm x 56.40mm
Desplazamiento :	198.80 cc
Índice de compresión :	9.5 + 0.5 : 1
Potencia máxima :	18 HP @ 8.000 rpm
Torque máximo :	17 Nm @ 6.000rpm
Sistema de ignición :	CDI digital con microprocesador
Bujías :	NGK CR8E ó Champion RG4HC (2 uds).
Tolerancia de las bujías :	0.6 a 0.8 mm
Lubricación :	Bomba húmeda de aceite, forzada.
Arranque :	Eléctrico.
Transmisión :	5 velocidades.
Freno delantero :	Disco hidráulico.

Freno trasero : Bandas expandibles.

Capacidad del tanque

Lleno :	15 litros
Reserva :	3.2 litros
Reserva utilizable :	2 litros

Dimensiones

Largo x Ancho x Alto :	2035 mm x 750 mm x 1165 mm
Distancia entre ejes :	1350 mm
Radio de giro :	2500 mm
Altura al piso :	165 mm (Min.)
Llantas Delantera :	90/90 x 17, 49P tubeless
Trasera :	120/80 x 17, 61P tubeless
Presión de aire Delantera :	28 PSI
Trasera (Solo) :	28 PSI
Trasera (Con Parrillero) :	30 PSI
Sistema Eléctrico :	12 Volts DC
Faro delantero :	35/35 W
Luz de día :	5 W c/u (2 Uds.)
Luz de Stop :	LED/LED
Luces direccionales :	10 W
Indicadores del tablero :	LED
Velocímetro :	Display digital
Pito :	12 V DC
Batería :	12V - 9 Ah
Peso en seco :	145 kg.





Línea Gratuita Nacional

01 8000 52 00 90

servicioalcliente@auteco.com.co

www.auteco.com.co

Medellín: 604 2511 • Bogotá: 744 8911

Cali: 487 9911 • Barranquilla: 386 0011